

Kit 1114

 
 
HYUNDAI Sonata, 4-dr Sedan, 98-00, 01-03, 04

HYUNDAI Sonata, 4-dr Sedan, *99-01, 02-05



HYUNDAI Sonata, 4-dr Sedan, 01-05

*North America



480R
754

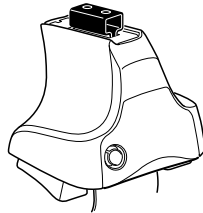






480

 
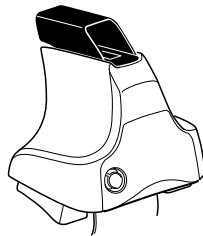 


750

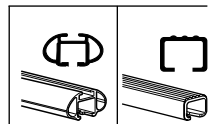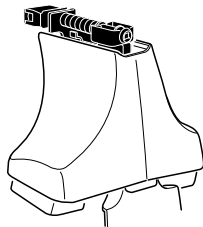  


Kit

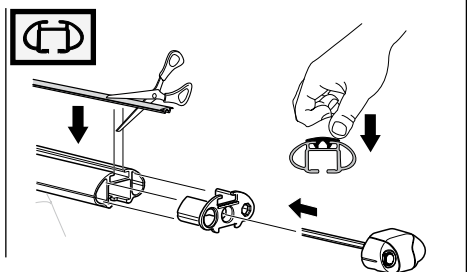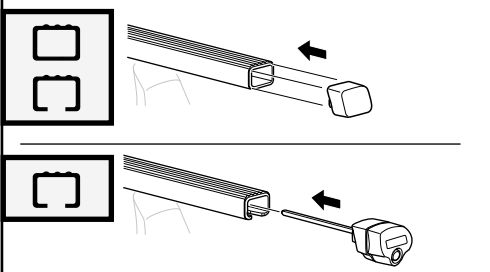  
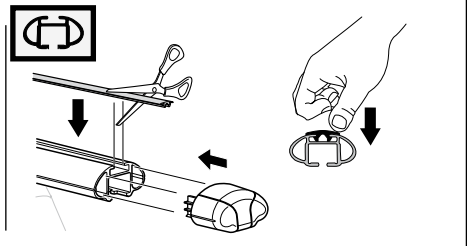 
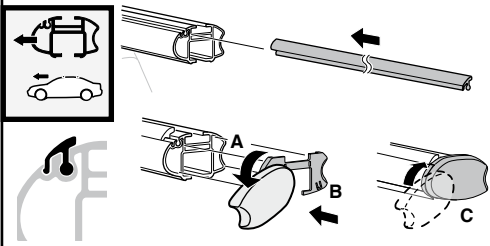 
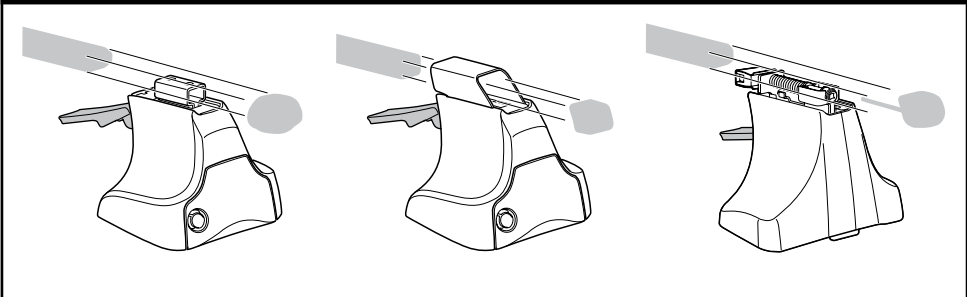 


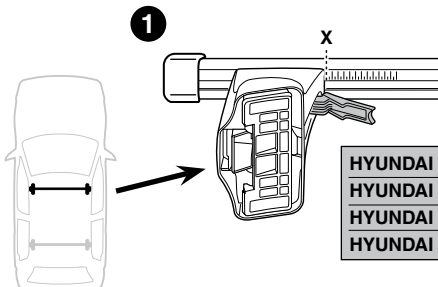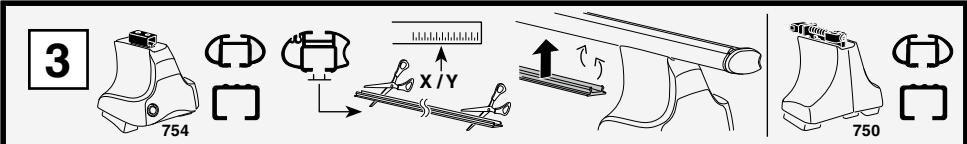  




	X
HYUNDAI Sonata , 4-dr Sedan, 98-00, 01-03,	38
HYUNDAI Sonata , 4-dr Sedan, 04	38
HYUNDAI Sonata , 4-dr Sedan, *99-01, 02-05	38
HYUNDAI Sonica , 4-dr Sedan, 01-05	38

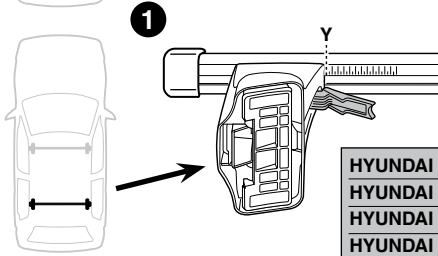 


	Y
HYUNDAI Sonata , 4-dr Sedan, 98-00, 01-03	35,5
HYUNDAI Sonata , 4-dr Sedan, 04	36,5
HYUNDAI Sonata , 4-dr Sedan, *99-01, 02-05	35,5
HYUNDAI Sonica , 4-dr Sedan, 01-05	36,5

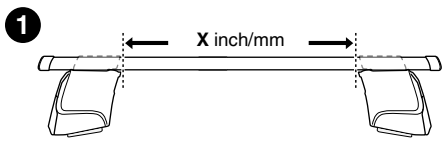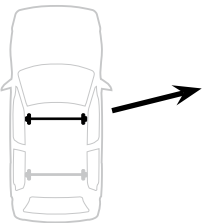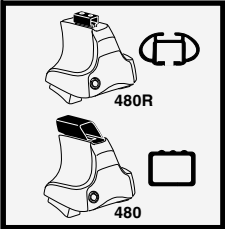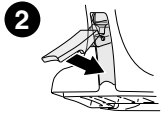    

	X inch	X mm
HYUNDAI Sonata , 4-dr Sedan, 98-00, 01-03	40 ⁵/₈ "	1031 mm
HYUNDAI Sonata , 4-dr Sedan, 04	40 ⁵/₈ "	1031 mm
HYUNDAI Sonata , 4-dr Sedan, *99-01, 02-05	40 ⁵/₈ "	1031 mm
HYUNDAI Sonica , 4-dr Sedan, 01-05	40 ⁵/₈ "	1031 mm

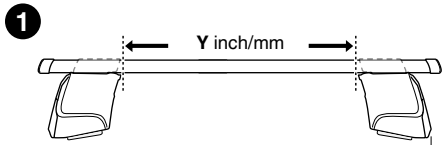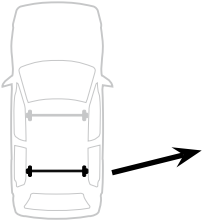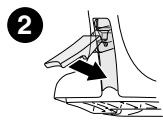   

	Y inch	Y mm
HYUNDAI Sonata , 4-dr Sedan, 98-00, 01-03	39 ⁵/₈ "	1006 mm
HYUNDAI Sonata , 4-dr Sedan, 04	40 "	1016 mm
HYUNDAI Sonata , 4-dr Sedan, *99-01, 02-05	39 ⁵/₈ "	1006 mm
HYUNDAI Sonica , 4-dr Sedan, 01-05	40 "	1016 mm

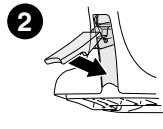 








4

HYUNDAI Sonata, 4-dr Sedan, 98-00, 01-03

HYUNDAI Sonata, 4-dr Sedan, 04

HYUNDAI Sonata, 4-dr Sedan, *99-01, 02-05

    
 
 
 
HYUNDAI Sonata, 4-dr Sedan, 01-05

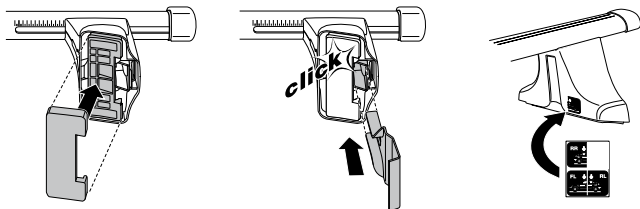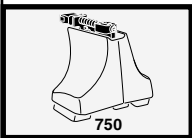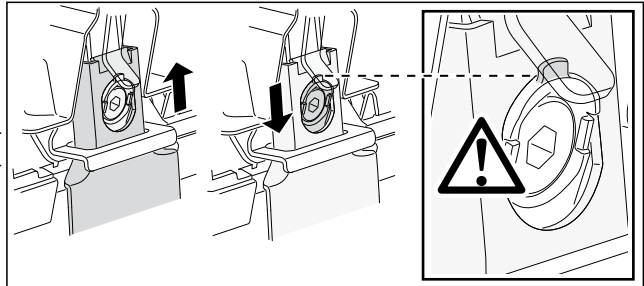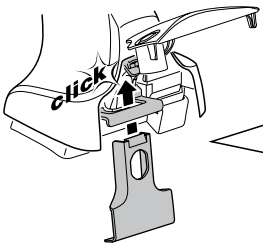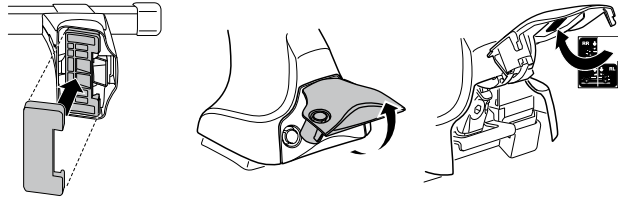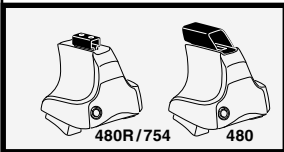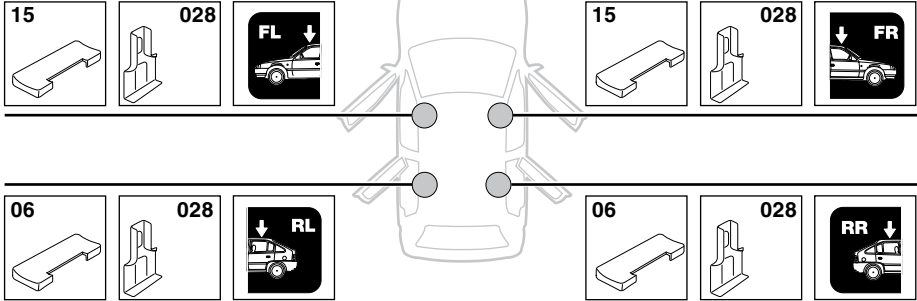

5



	X mm	Y mm	X inch	Y inch
HYUNDAI Sonata , 4-dr Sedan, 98-00, 01-03	250 mm	650 mm	9 7/8"	25 5/8"
HYUNDAI Sonata , 4-dr Sedan, 04	250 mm	650 mm	9 7/8"	25 5/8"
HYUNDAI Sonata , 4-dr Sedan, *99-01, 02-05	250 mm	650 mm	9 7/8"	25 5/8"
HYUNDAI Sonica , 4-dr Sedan, 01-05	250 mm	650 mm	9 7/8"	25 5/8"

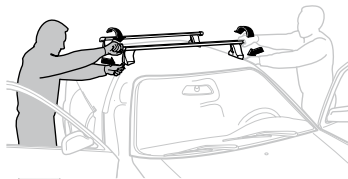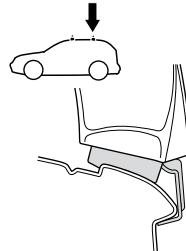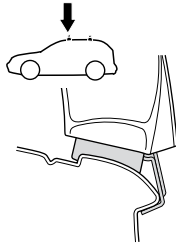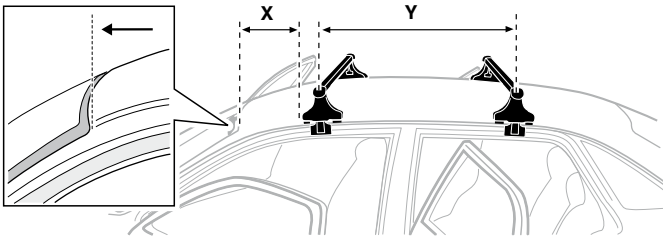    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielieciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte bagażníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól fűggetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชั้โน้แบบสลับ

 
6



480R/754



480

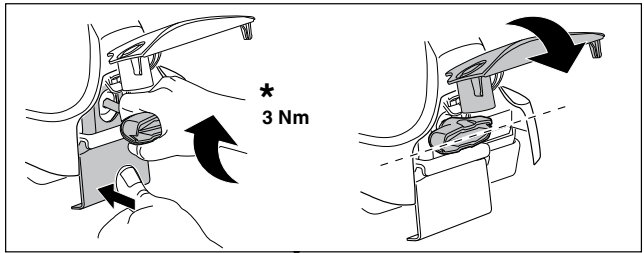



*
3 Nm




*




 
*
≈ 3 Nm

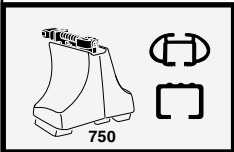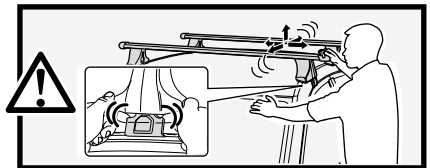


750

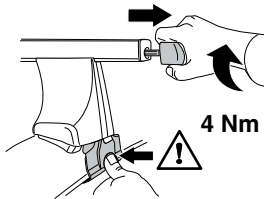 


4 Nm

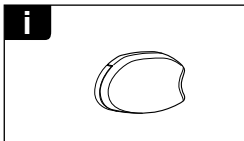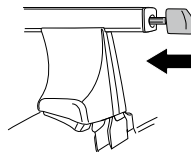  


i

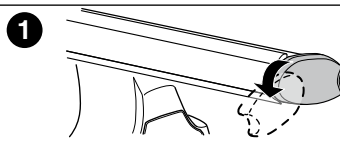 


1

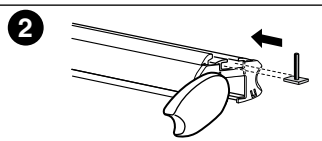 


2

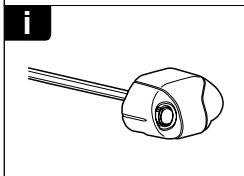 


i

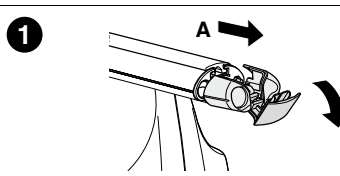 


1

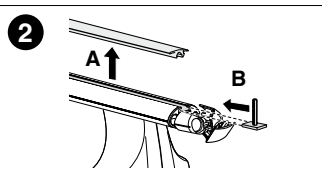 


2

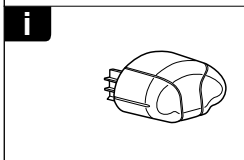 

i

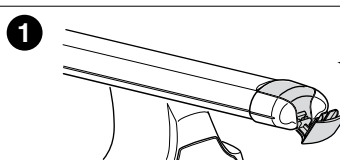 

1

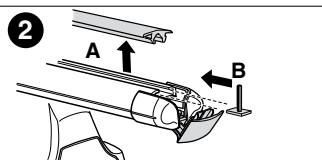 

2



THULE
SWEDEN
**ONE
KEY
SYSTEM**



		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		(x12)



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com

503-1114-02