



Kit 1083

TOYOTA Hilux, 2-dr Pickup, 98-04



TOYOTA Hilux, 2-dr Pickup extended, 98-04

TOYOTA Hilux, 4-dr Pickup double cab, 98-04

 
 
480R
754

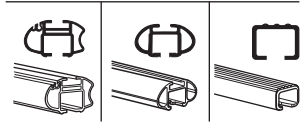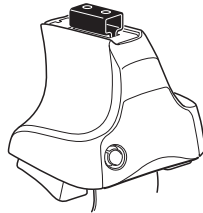

480

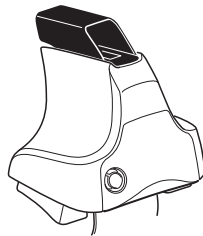  

750

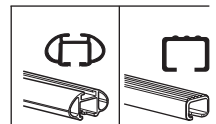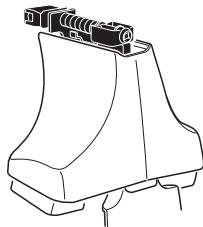  

TOYOTA Hilux, 2-dr Pickup, 98-04

Max.
30kg/66 lbs

TOYOTA Hilux, 2-dr Pickup extended, 98-04
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

Max.
60kg/132 lbs

80 km/h
50 Mph
130 km/h
80 Mph
40 km/h
25 Mph
km/h
Mph

THULE
Instructions
Kit XXXX
THULE

480R/754

480

 
 
750

x2
x2
x2
x4
x2
x2
x2
x2
x2
x4
x4


211 x4
224 x2
212 x2
07 x4

FR
FR
FL
RL
x1



Kit

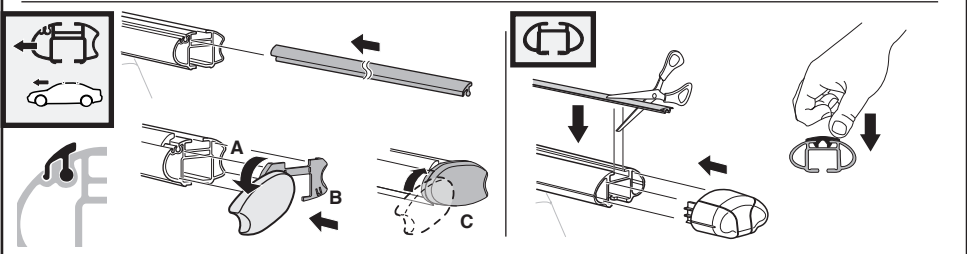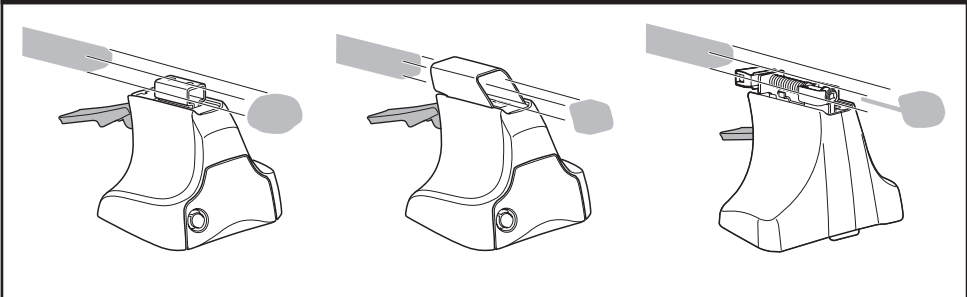

3

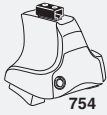



754

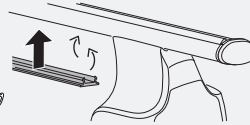  


750



  1

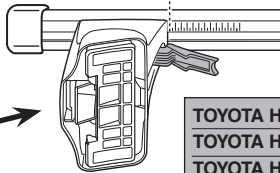


2

 


	X
TOYOTA Hilux, 2-dr Pickup, 98-04	33,5
TOYOTA Hilux, 2-dr Pickup extended, 98-04	33,5
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	33,5

 1

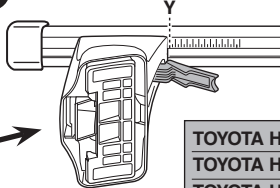

2

 

	Y
TOYOTA Hilux, 2-dr Pickup, 98-04	-
TOYOTA Hilux, 2-dr Pickup extended, 98-04	33,5
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	33,5

 


480R




480

1




2

 


	X inch	X mm
TOYOTA Hilux, 2-dr Pickup, 98-04	38 ⁷ / ₈ "	986 mm
TOYOTA Hilux, 2-dr Pickup extended, 98-04	38 ⁷ / ₈ "	986 mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	38 ⁷ / ₈ "	986 mm

 1




2

 














	Y inch	Y mm
TOYOTA Hilux, 2-dr Pickup, 98-04	-	-
TOYOTA Hilux, 2-dr Pickup extended, 98-04	38 ⁷ / ₈ "	986 mm
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	38 ⁷ / ₈ "	986 mm

4

 TOYOTA Hilux, 2-dr Pickup, 98-04













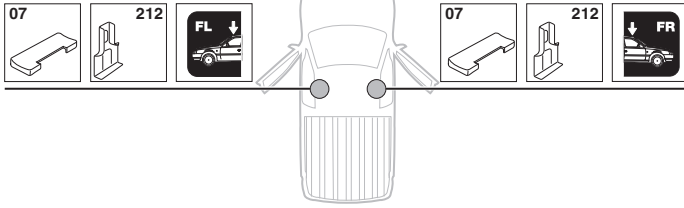


             TOYOTA Hilux, 2-dr Pickup extended, 98-04

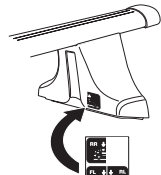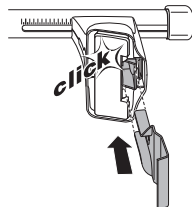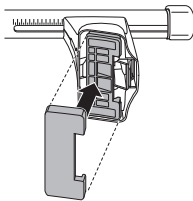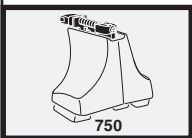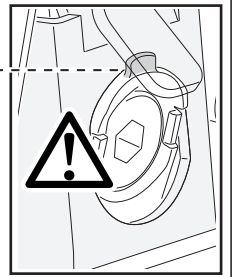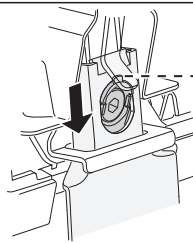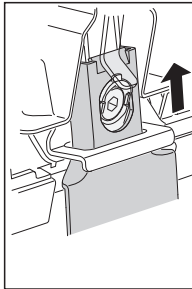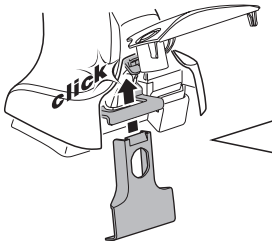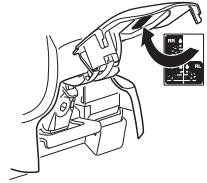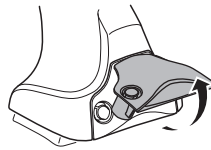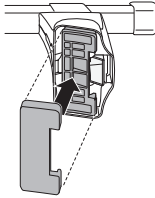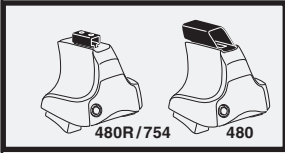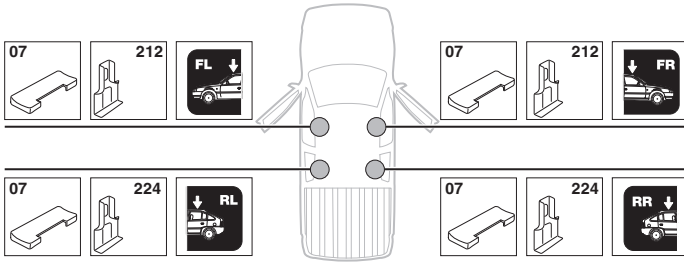


4

             TOYOTA Hilux, 4-dr Pickup double cab, 98-04

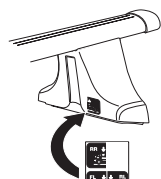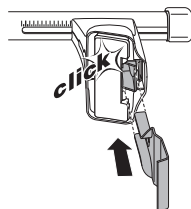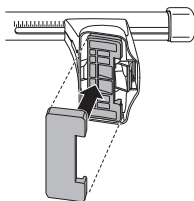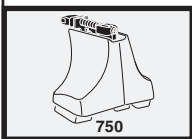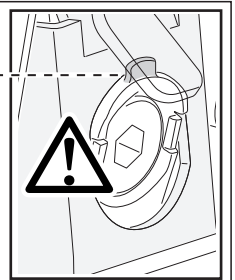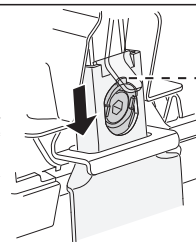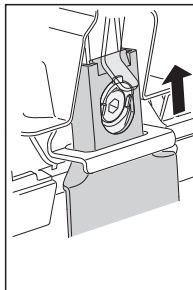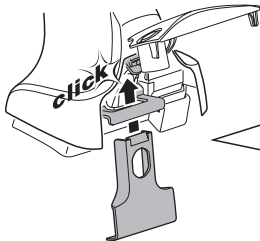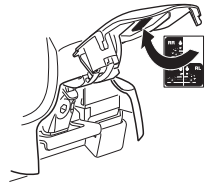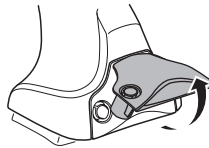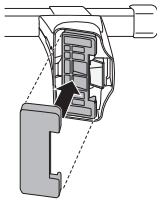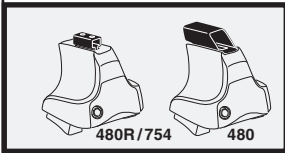
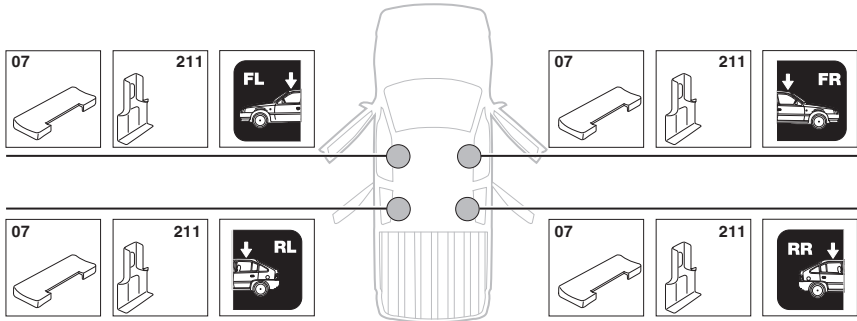


5




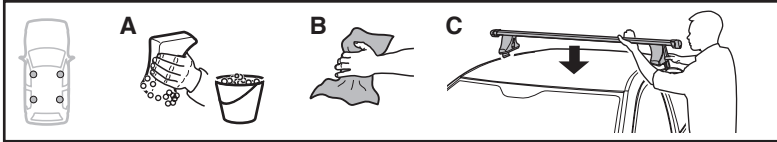 


	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 2-dr Pickup, 98-04	230 mm	–	9"	–
TOYOTA Hilux, 2-dr Pickup extended, 98-04	230 mm	600 mm	9"	23 5/8"

  TOYOTA Hilux, 2-dr Pickup, 98-04

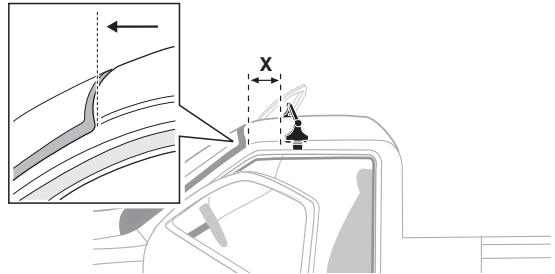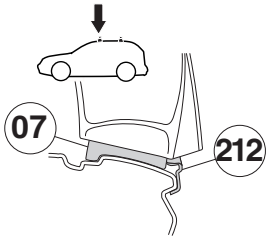


    TOYOTA Hilux, 2-dr Pickup extended, 98-04

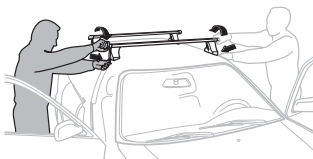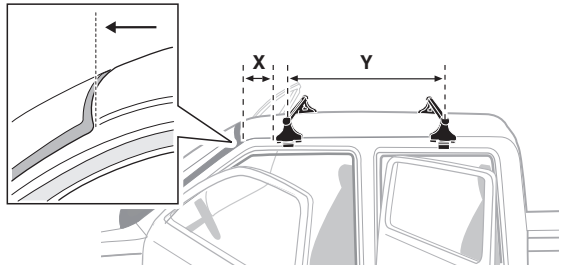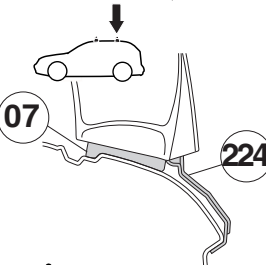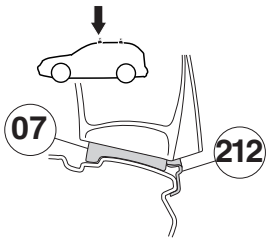





- | | | | |
|-------|---|-----|--|
| GB/US | Tighten alternately | CZ | Pokrěťte багаžníka dokřečaj dokřečaj naprziemiennie. |
| D | Die Schrauben abwechselnd anziehen | SK | Dotahujte striedavo |
| F | Serrer alternativement chaque côté | SLO | Privijajte izmenično. |
| NL | Afwisselend aan de linker- en de rechterkant aandraaien | HR | Naizmjenično zategnite |
| I | Alternare il serraggio delle viti | HU | Egymástól függetlenül szorítandó |
| E | Serrare alternativamente | GR | Σφίγγετε εναλλάξ |
| PT | Aperte alternadamente | TR | Dönüştürmüli sıkın |
| S | Dra åt växelvis | 中文 | 交替拧紧 |
| FIN | Kierrä vuorotellen | 한국어 | 변갈아 가며 조이십시오. |
| EST | Pinguldage vaheldumisi | 日本語 | 交互に締め付けてください。 |
| LAT | Pielvelciēt pamišus | ไทย | ขันในแบบสลับ |
| LIT | Užsukinėkite pakaitomis | | |
| PL | Śruby dokręcaj naprzemiennie | | |
| RU | Затягивайте попеременно | | |

 5

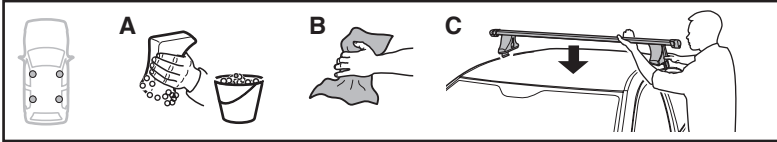

	X mm	Y mm	X inch	Y inch
TOYOTA Hilux, 4-dr Pickup double cab, 98-04	300 mm	700 mm	11 $\frac{3}{4}$"	27 $\frac{1}{2}$"

    TOYOTA Hilux, 4-dr Pickup double cab, 98-04

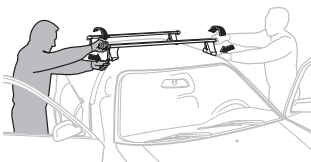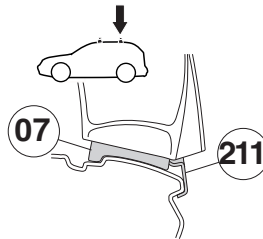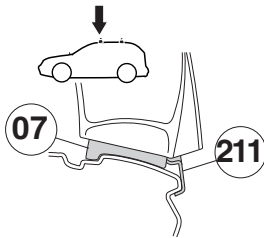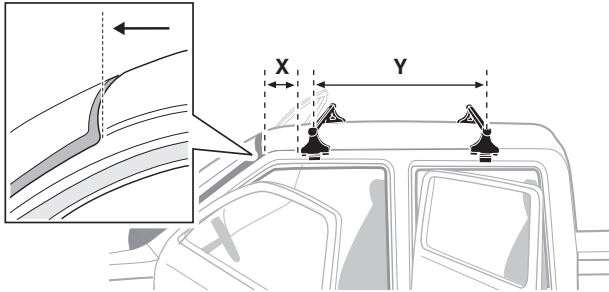

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Serrare alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamīšus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokrétla bagażníka dokręcaj dokręcaj naprzemiennie.
SK Dotahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egy mástól függetlenül szorítandó
GR Σφιγχετε εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชั้สลับแบบสลับ

 
 
 
 
6












480R/754








480

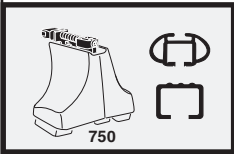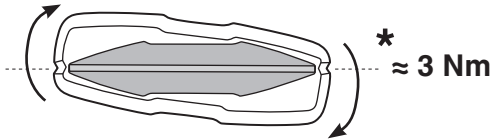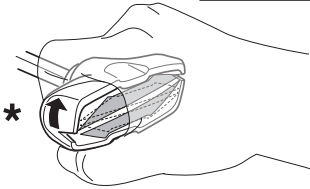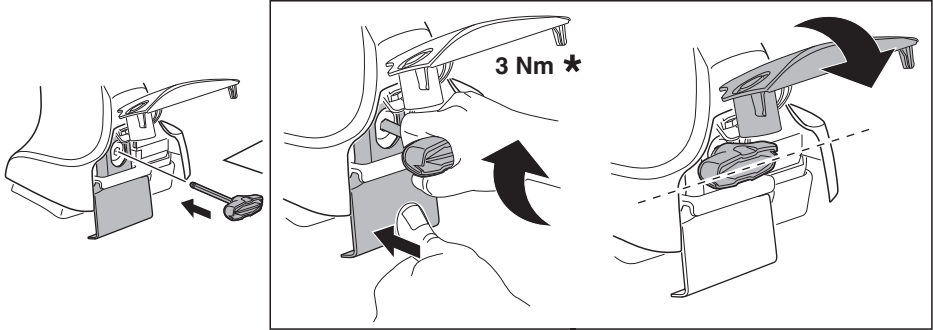


750

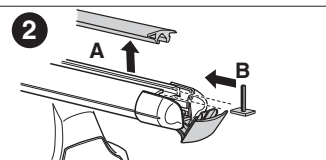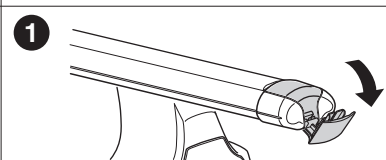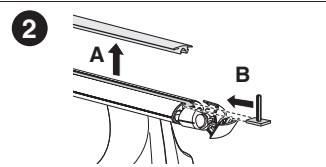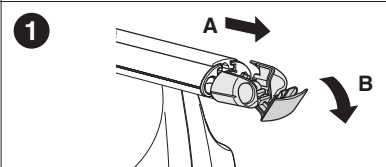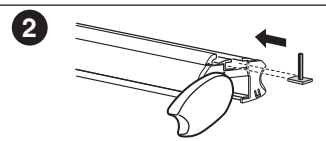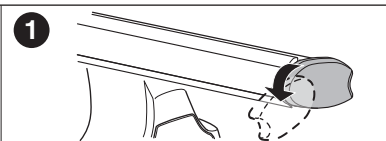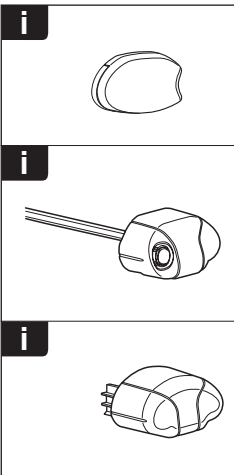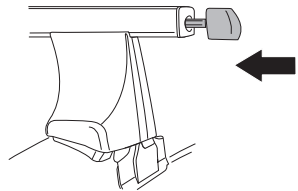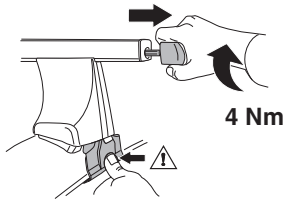         


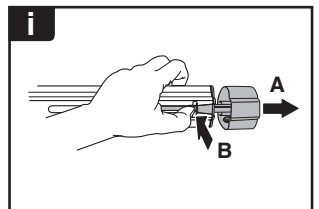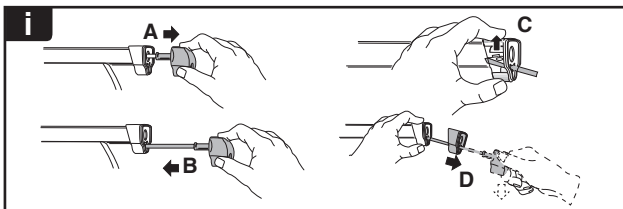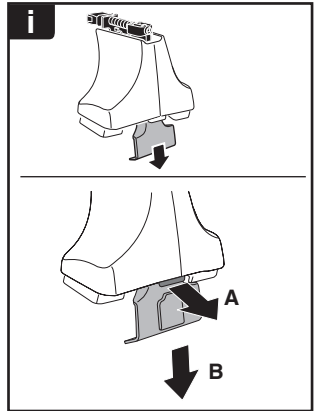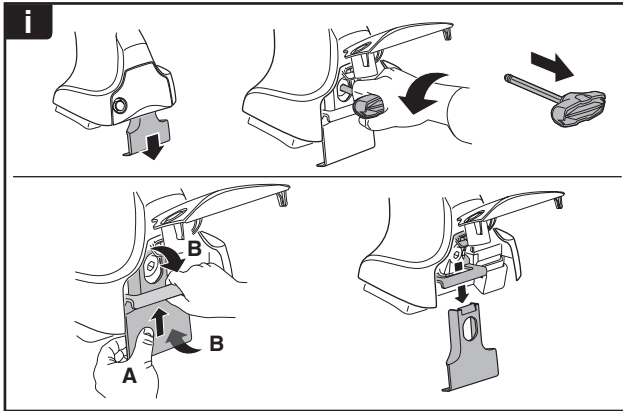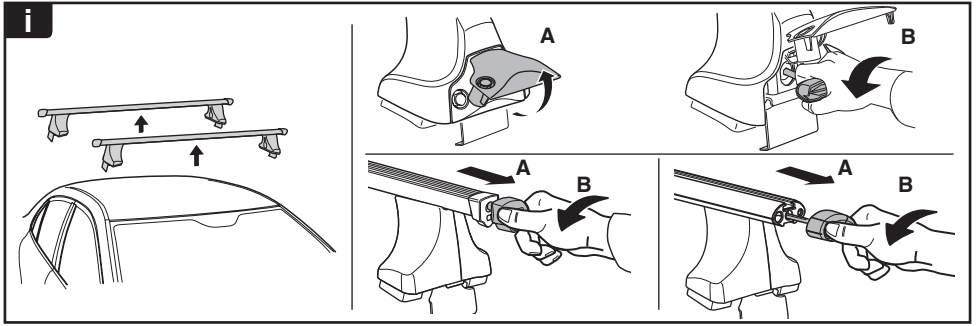   

THULE
SWEDEN
**ONE
KEY
SYSTEM**

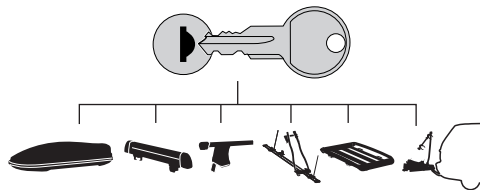 

 - 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA

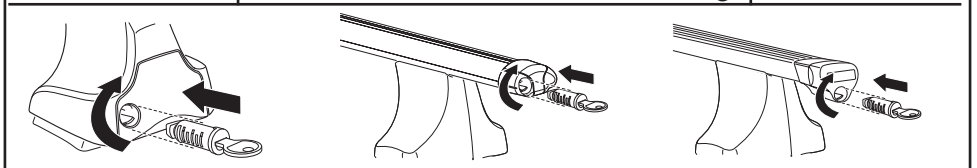

WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

 
 
 
 
 
info@thule.com
customer.service@thule.com

 
 
 
www.thule.com

 
www.thuleprofessional.com

info@thule.com
customer.service@thule.com

Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA
Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN

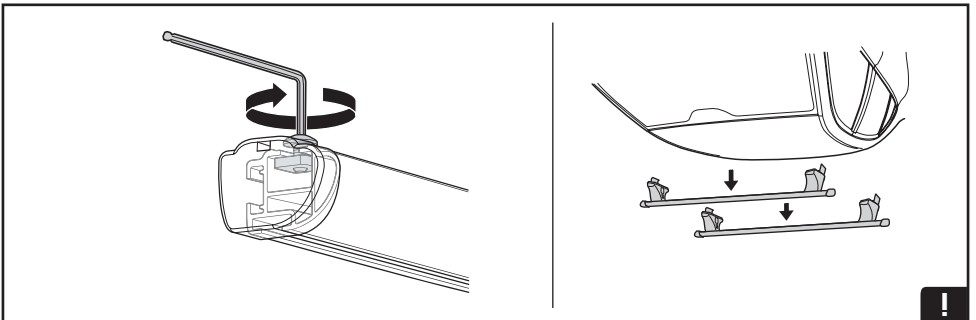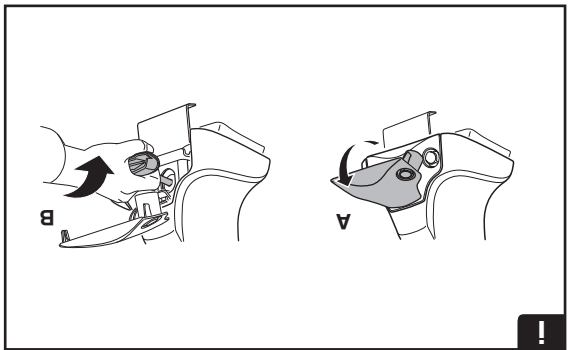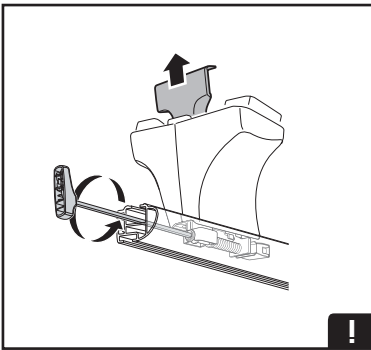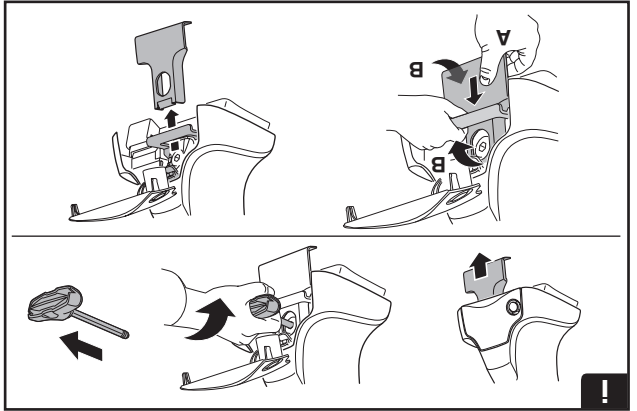
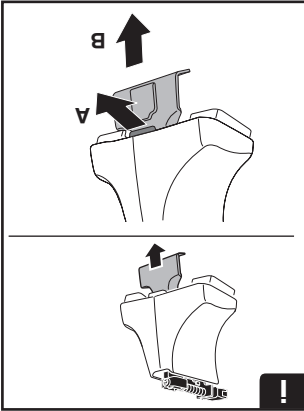


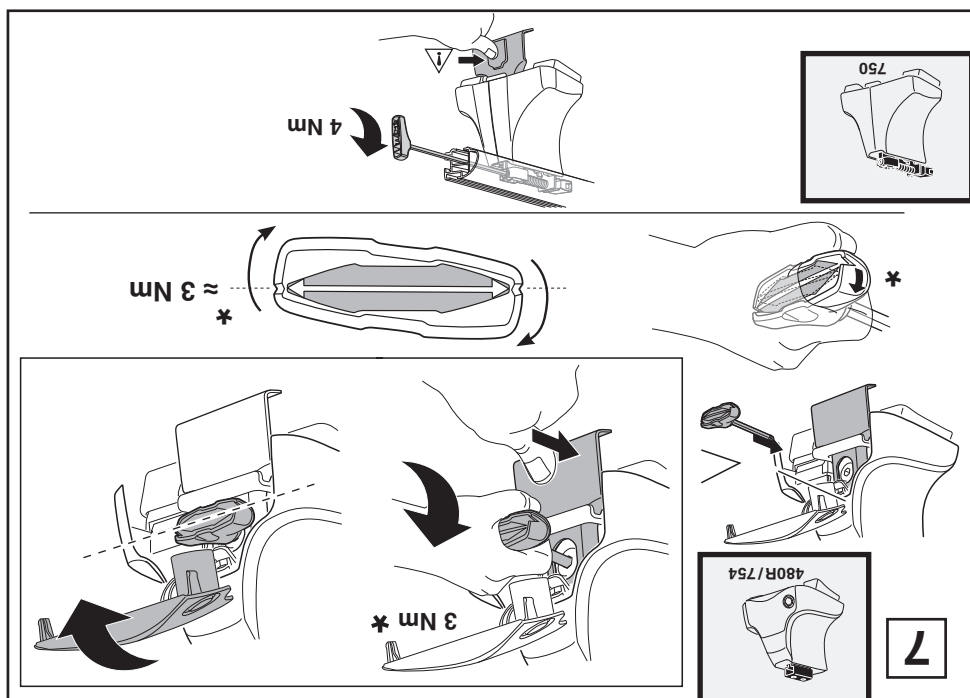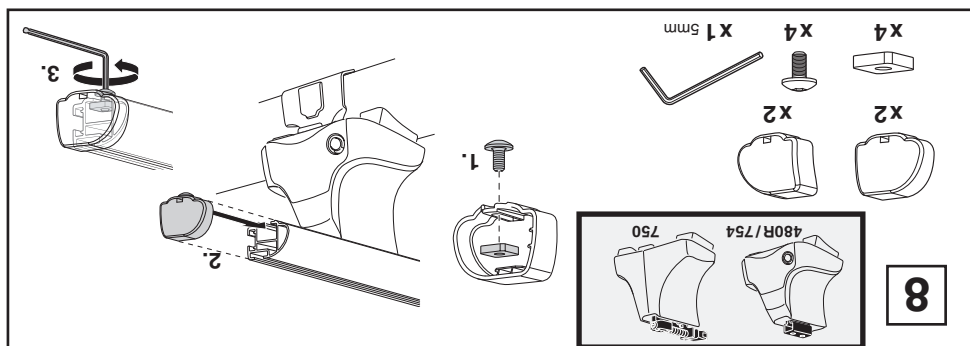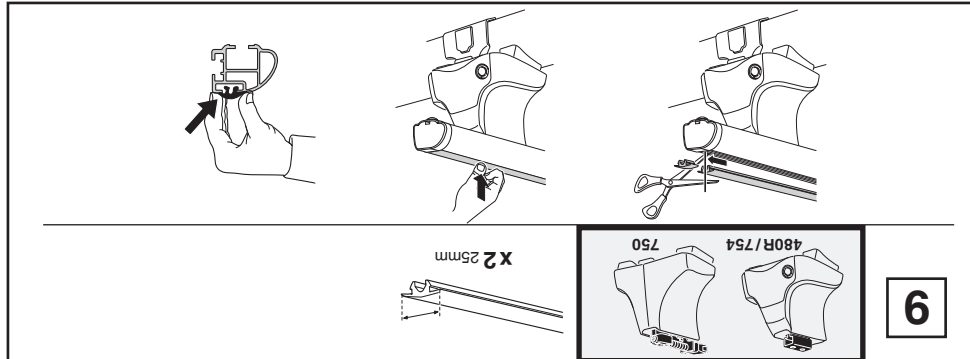

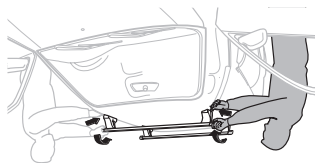


- GB/US Tighten alternately
- D Die Schrauben abwechselnd
- NL anziehen
- F Serrer alternativement chaque côté
- HR Aftisselend aan de linker- en de
- I richienkant aandraaien
- ALternare il serraggio delle viti
- E Serrare alternativamente
- PT Aperte alternadamente
- S Dra åt växelvis
- FIN Kierra vuorotellen
- EST Pnguldage vaheldumisi
- LAT Pivēciēt pārtisus
- LT Užskinkite pakaitomis
- PL Słubę dokręcaj naprzemiennie
- RU Затягивайте попеременно

  - CZ Pokrétla bagazníka dokręcaj
- SK Dokrúťte striedavo
- SLO Privijajte izmenično.
- HR Najzmenično zategnite
- HU Egy mástól fűggetlenül
- GR Zpilyete evadák szorítandó
- TR Döngümlü sıkın
- 中文 交替拧紧
- 한국어 번갈아 가며 조이십시오.
- 日本語 交互に締め付けてください。
- 日本語 交互に締め付けてください。

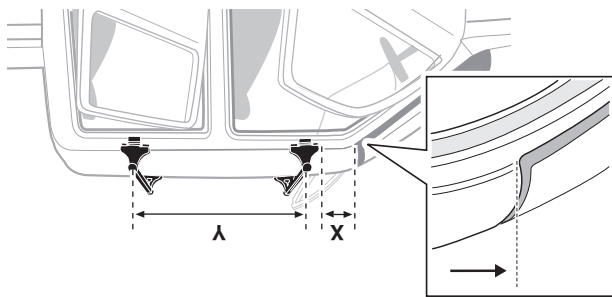
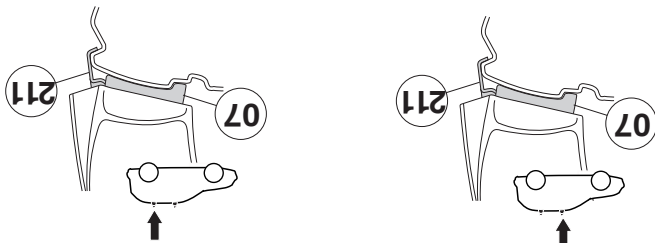


TOYOTA Hilux, 4-dr Pickup double cab, 98-04


TOYOTA Hilux, 4-dr Pickup double cab, 98-04		TOYOTA Hilux, 4-dr Pickup double cab, 98-04	
X mm	300 mm	Y mm	700 mm
X inch	11 3/4"	Y inch	27 1/2"

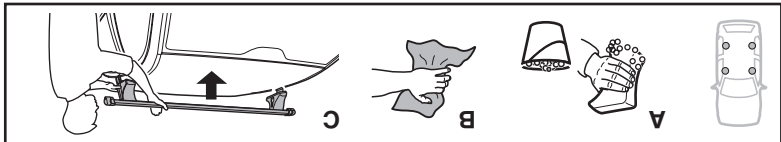 

6

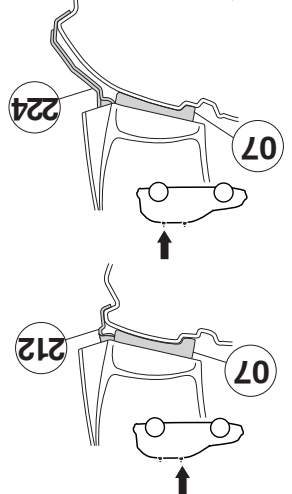 
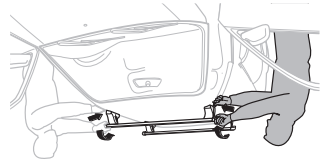 


 TOYOTA Hilux, 2-dr Pickup extended, 98-04

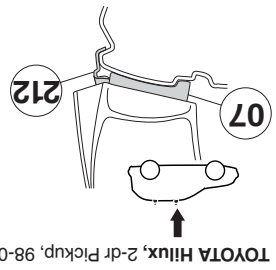














TOYOTA Hilux, 2-dr Pickup, 98-04

  - GB/US Tighten alternately
- D Die Schrauben abwechselnd anziehen
- F Serrer alternativement chaque côté
- NL Afwisselend aan de linker- en de rechterkant aandraaien
- I Alternare il serraggio delle viti
- E Serrare alternativamente
- PT Aperte alternadamente
- S Dra åt växelvis
- FIN Kierra vuorotellen
- EST Pinguidage vaheldumisi
- LAT Pīvelciēt pārtaus
- LT Užskūkite pakaitomis
- PL Śruby dokręcaj naprzemiennie
- RU Затягивайте попеременно
- CZ Pokrétla bagazníka dokręcaj dokręcaj střídavo
- SK dokręcaj naprzemiennie
- SLO Prvičajte izmenično
- HR Najzajmjenično zategnite
- HU Egymástól fuggelentül szorítandó
- GR Zφύγεται εναλλάξ
- TR Donşutümü sikin
- 中文 交替拧紧
- 한국어 편갈아 가며 조이십시오.
- 日本語 交互に締め付けてください。
- Українська змінюючи












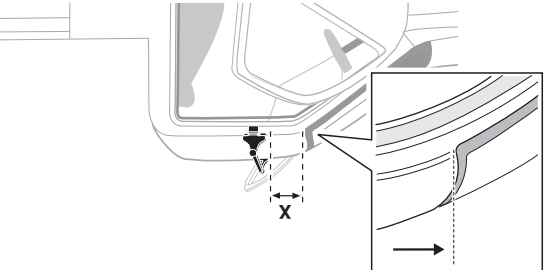
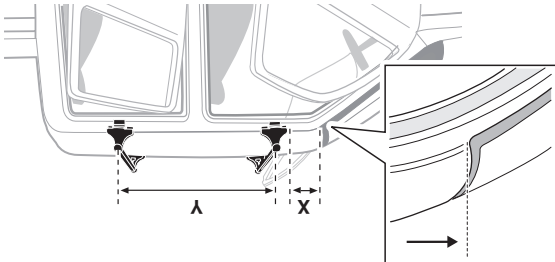


TOYOTA Hilux, 2-dr Pickup, 98-04	X mm	230 mm	Y mm	600 mm	X inch	9"	Y inch	23 5/8"
TOYOTA Hilux, 2-dr Pickup extended, 98-04	X mm	230 mm	Y mm	600 mm	X inch	9"	Y inch	23 5/8"

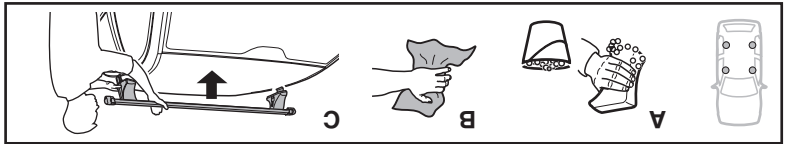 


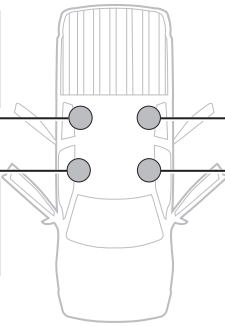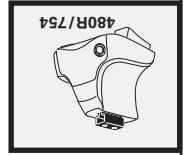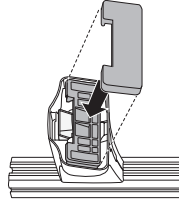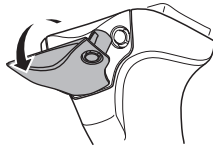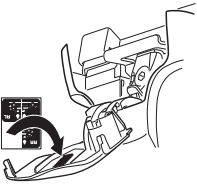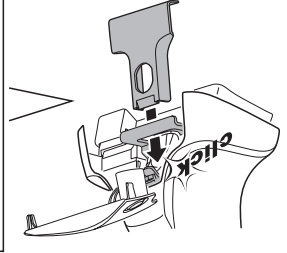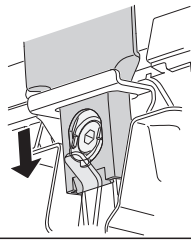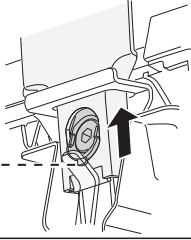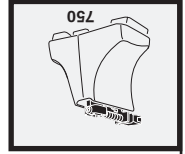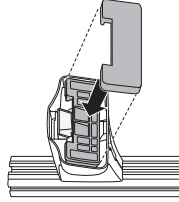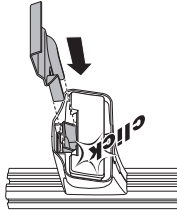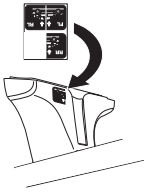            

          

TOYOTA Hilux, 4-dr Pickup double cab, 98-04

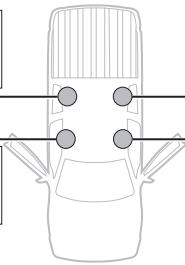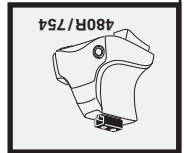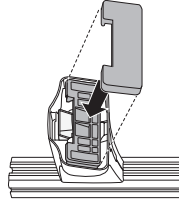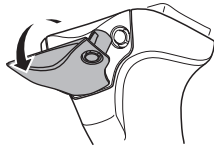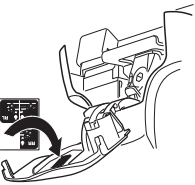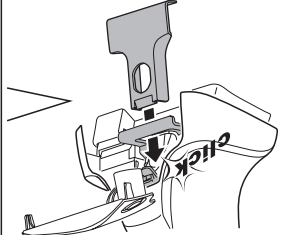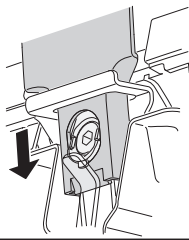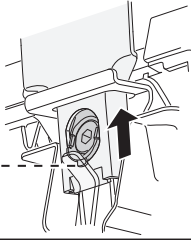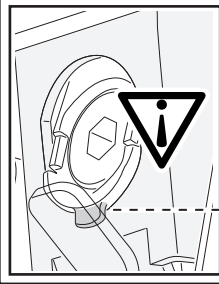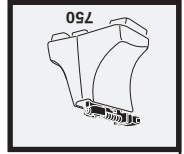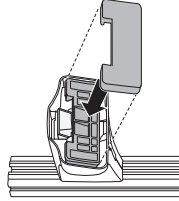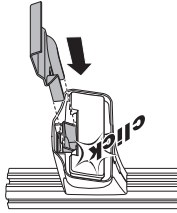
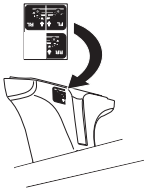


 TOYOTA Hilux, 2-dr Pickup extended, 98-04

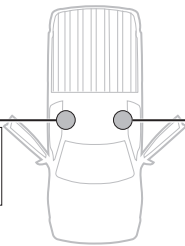


TOYOTA Hilux, 2-dr Pickup, 98-04

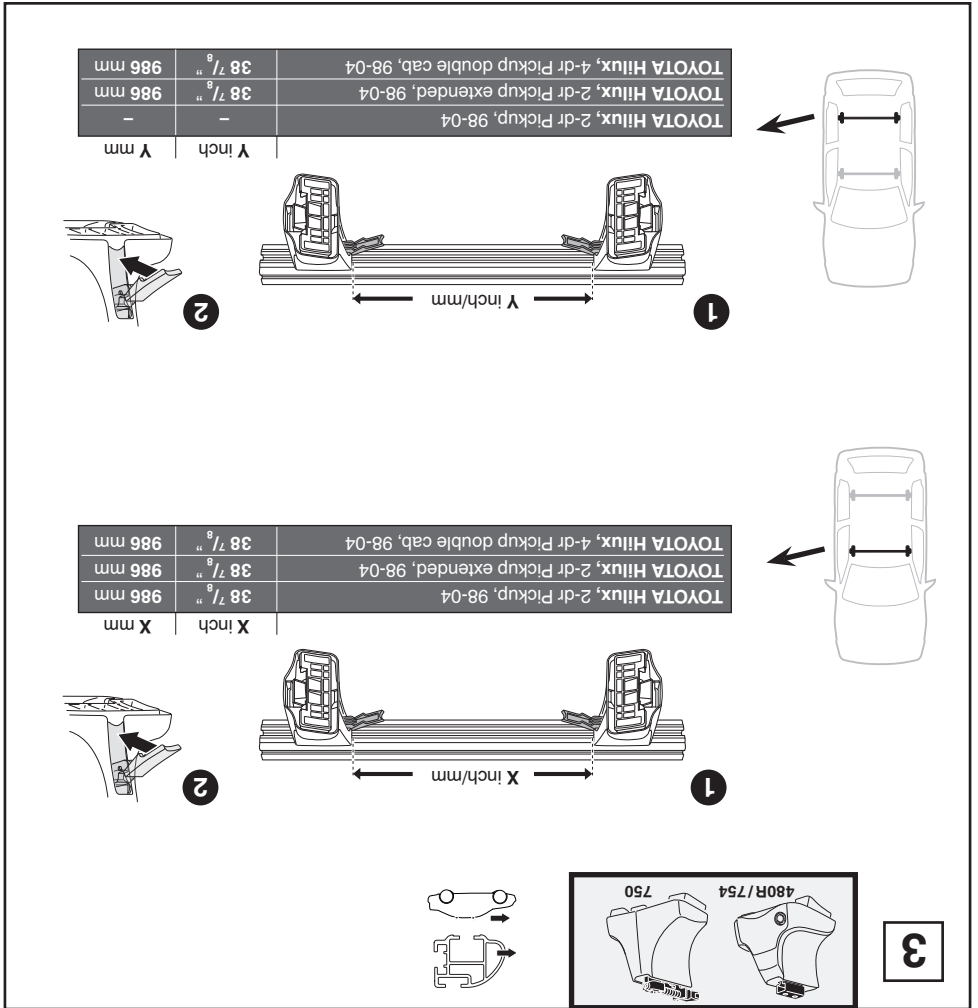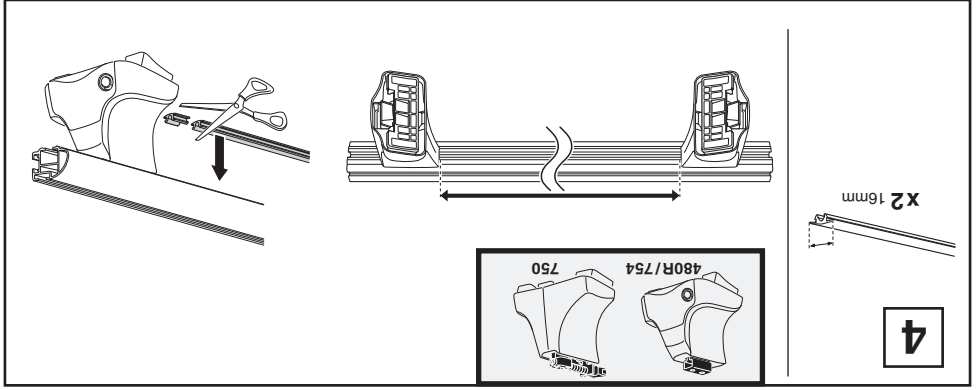  





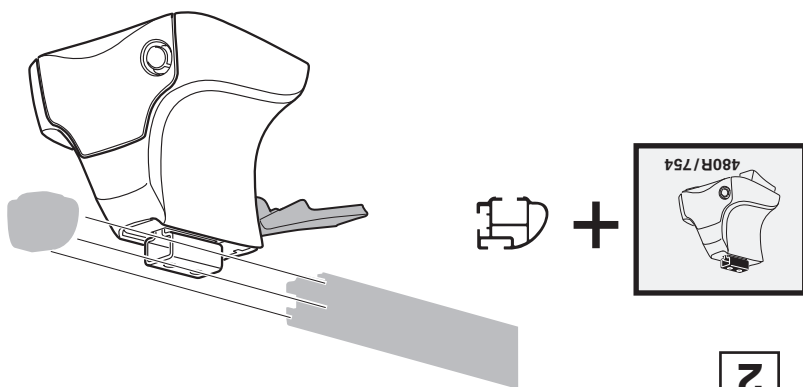 
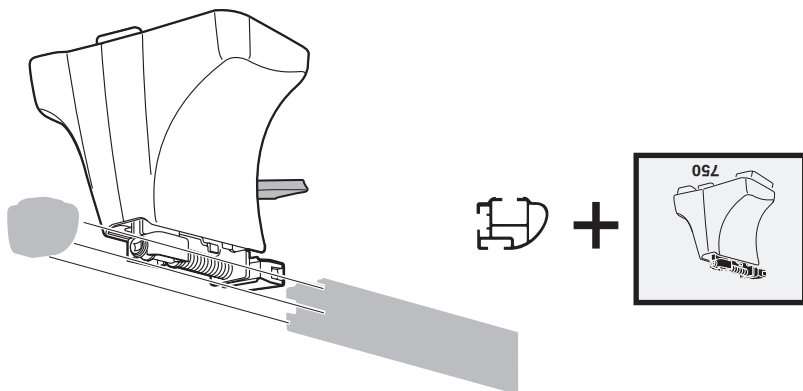 


2

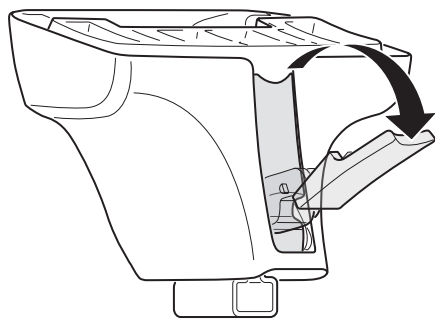 

1

    Kit

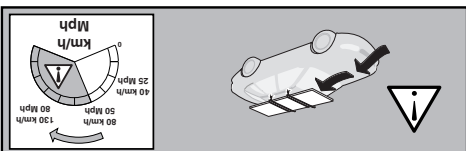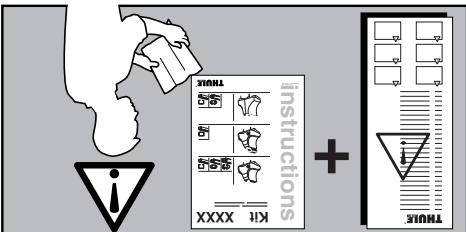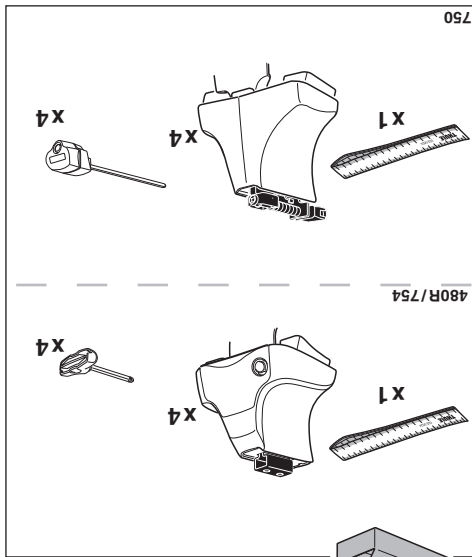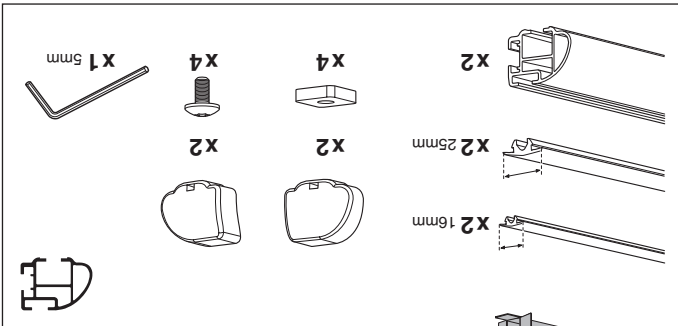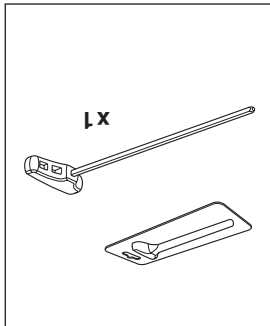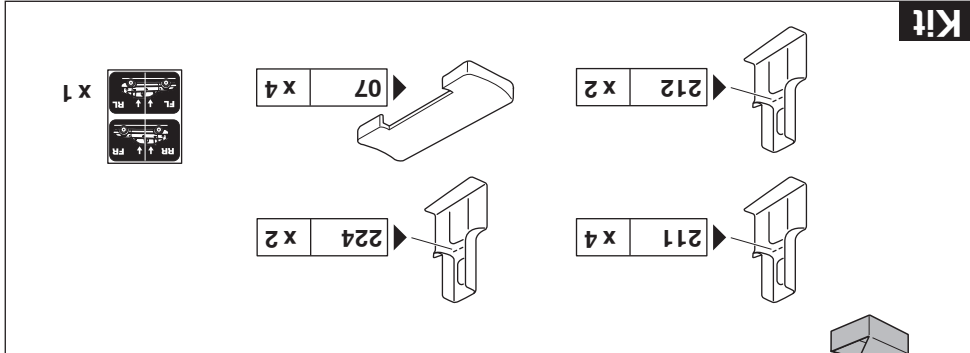

TOYOTA Hilux, 2-dr Pickup extended cab, 98-04
 + $\begin{matrix} \text{xx kg} \\ \text{xx lbs} \end{matrix}$ = **Max. 60kg/132 lbs**

TOYOTA Hilux, 2-dr Pickup, 98-04
 + $\begin{matrix} \text{xx kg} \\ \text{xx lbs} \end{matrix}$ = **Max. 30kg/66 lbs**



instructions

20090511: 503-1083

ISO 11154-E

PROFESSIONAL

  THULE
SWEDEN[®]

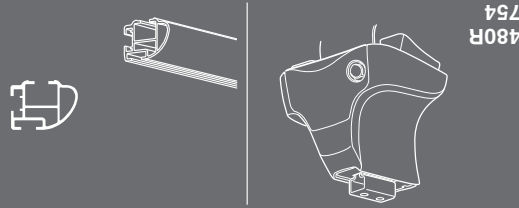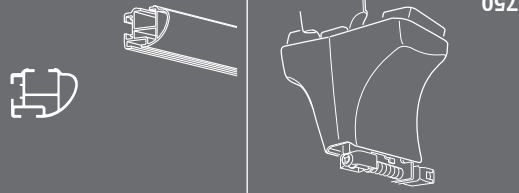

TOYOTA Hilux, 2-dr Pickup, 98-04
TOYOTA Hilux, 2-dr Pickup extended, 98-04
TOYOTA Hilux, 4-dr Pickup double cab, 98-04

Kit 1083