 
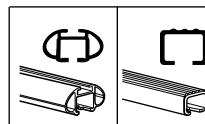 


Kit 1311

 
 
RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07

RENAULT Laguna II, 5-dr Estate, 02-04, 05-07



**480R
754**

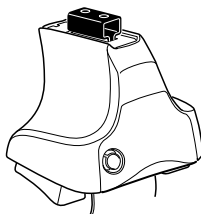

480

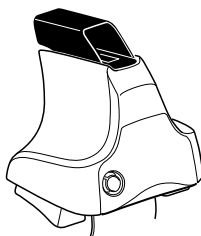

750

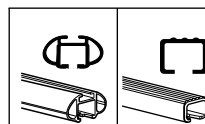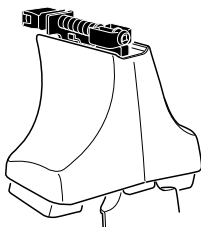  

THULE[®]
SWEDEN

ISO 11154-E

**Max.
60 kg**
**Max.
132 lbs**

Kit XXXX
instructions

480R/754

480

750

 
575 **x 4**

02 **x 4**

FR **FL** **RL** **RR** **x 1**

Kit

1




480R/754



480



 750

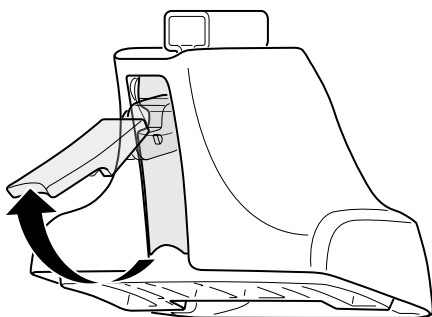

2



480R/754

 
 
 
 
 
 
 
 


480




750


+

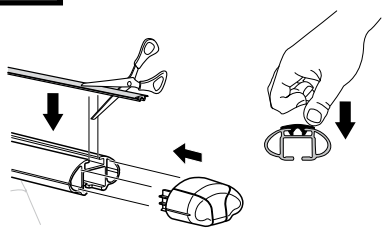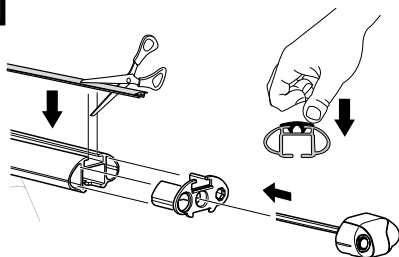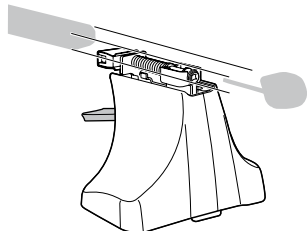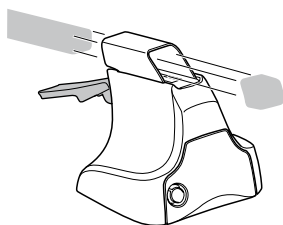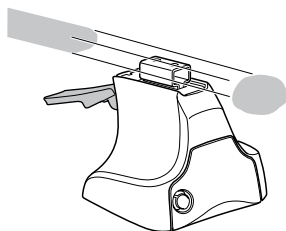

3


 


754

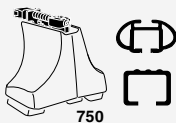 


750

  1

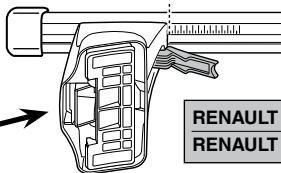

2

 

X

 
RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07

27,5


RENAULT Laguna II, 5-dr Estate, 02-04, 05-07

27,5

1

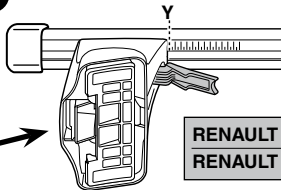

2

 

Y

RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07

 
25,5

RENAULT Laguna II, 5-dr Estate, 02-04, 05-07

25,5




480R




480

 1



2

 

X inch

X mm

RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07

36 1/2"

 
926 mm

RENAULT Laguna II, 5-dr Estate, 02-04, 05-07

36 1/2"

926 mm

1



2



Y inch

Y mm

RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07

35 5/8"

906 mm

RENAULT Laguna II, 5-dr Estate, 02-04, 05-07

 
 
 
 
 
 
 
 
 
 
 
 
 
35 5/8"

906 mm


4

RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07





RENAULT Laguna II, 5-dr Estate, 02-04, 05-07

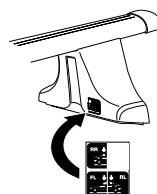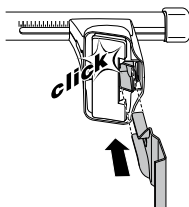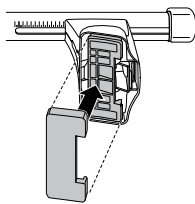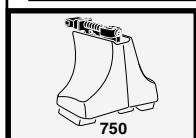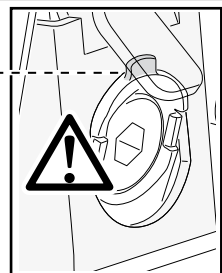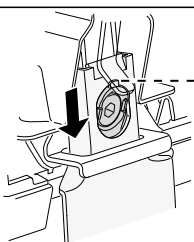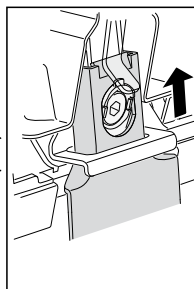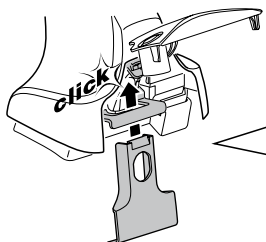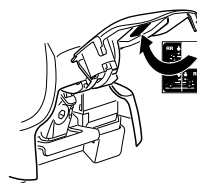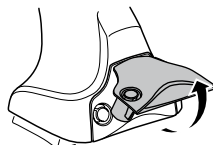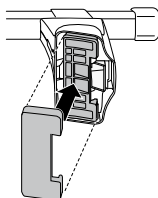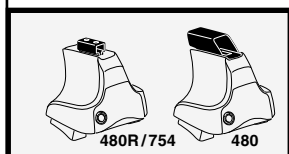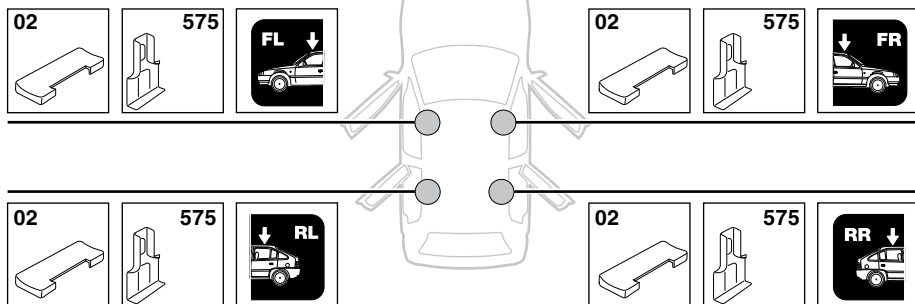

5

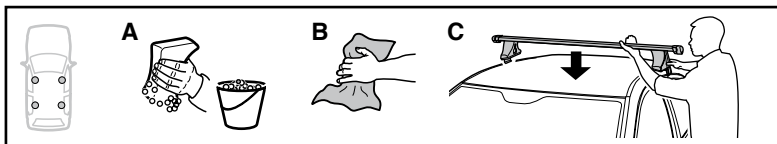 

	X mm	Y mm	X inch	Y inch
RENAULT Laguna II, 5-dr Hatchback, 02-04, 05-07	240 mm	710 mm	9 1/2"	28"
RENAULT Laguna II, 5-dr Estate, 02-04, 05-07	340 mm	825 mm	13 3/8"	32 1/2"

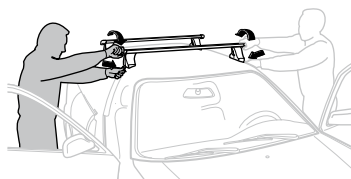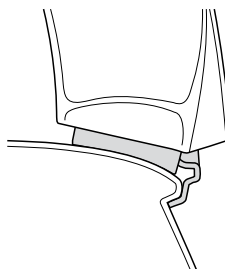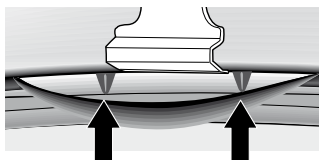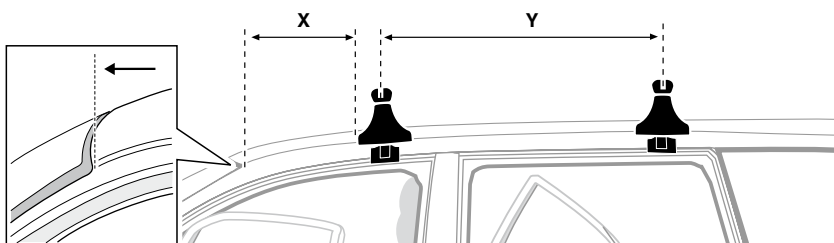    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ









6











480R/754








        480

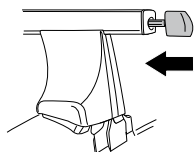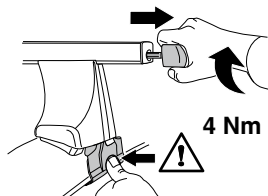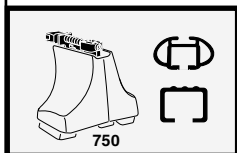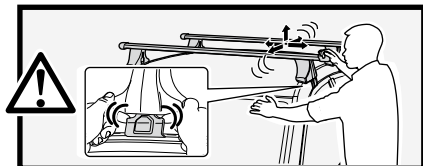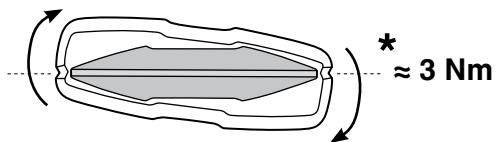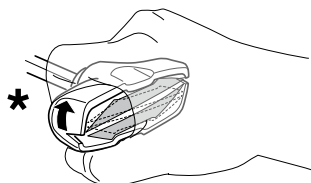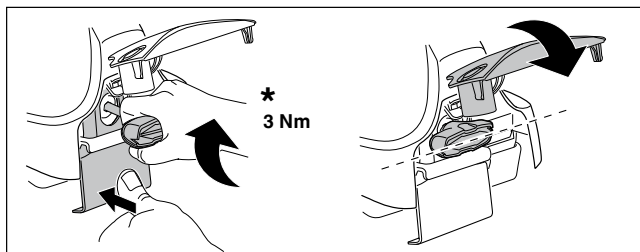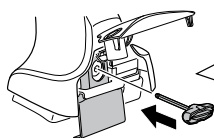

7

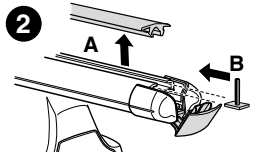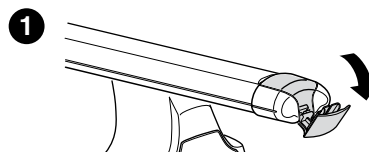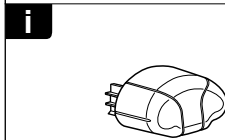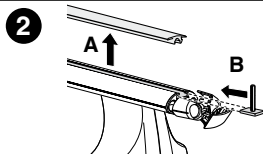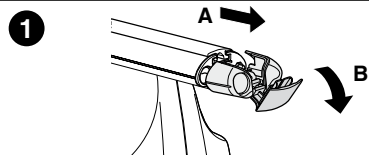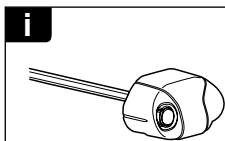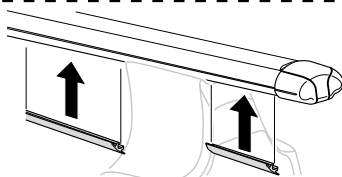        

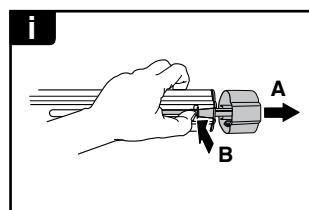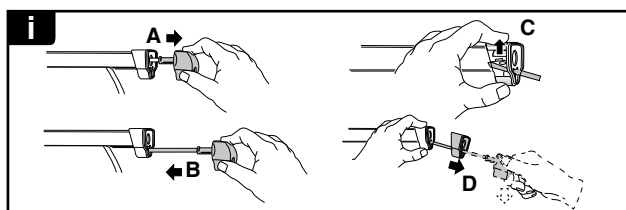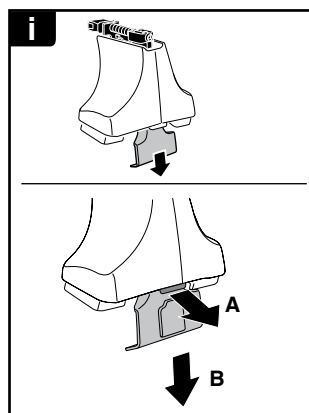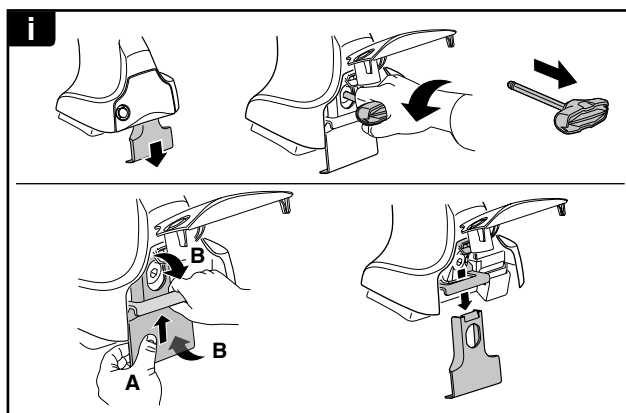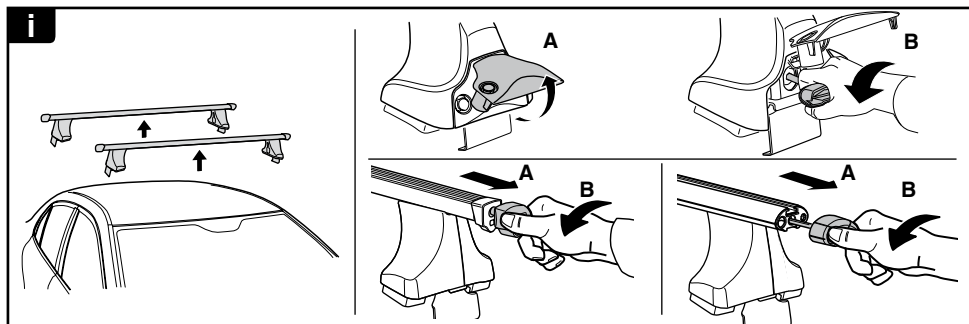     

THULE
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA