K312 FITTING INSTRUCTIONS



These fitting instructions contain information specific for your vehicle. They should be read in conjunction with your crossbar instructions.

Kit contains:


4 x Clamps

Contact your Prorack dealer if any parts are missing

Items you may require that are not included:

1 x Tape Measure

Instructions

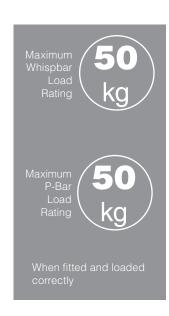

Crossbar Spacing

Pictured are Whispbar Flush Bars. Positioning also applicable for Whispbar Through Bars and P-Bars



