

K370 FITTING KIT INSTRUCTIONS



These fitting instructions contain information specific for your vehicle. They should be read in conjunction with your crossbar instructions.

Kit Contains

- | | |
|---------------------------------|---|
| 1 x Instructions | 2 x Pads Part № 11-04-222 (A) |
| 4 x Red Plastic Knobs with nuts | 2 x Pads Part № 11-04-223 (B) |
| 4 x Plastic Internal Blocks | |
| 4 x Grub Screws | Refer to the step 1.5 for the correct position of pads. |
| 1 x Allen Key 3mm | |

Items you will require that are not included:

- 1 x Tape measure

Remove parts from box & check
Contact your Prorack dealer if any parts are missing or damaged

Important Note:

Whispbar Flush Bar pictured in these instructions, also applicable for Whispbar Through Bar

Maximum
Whispbar
Load
Rating

75
kg

When Fitted and loaded
correctly



1.1



1.2




1.3

- Remove crossbar and fitting kit parts from the packaging
- Follow steps 1 to 3 of crossbar assembly instructions
- Remove clamp block by pressing it backwards
- Select plastic internal block (from fitting kit) and insert it into foot
- Repeat for all four legs



1.4

- Refer to the underside of the pad for the part number

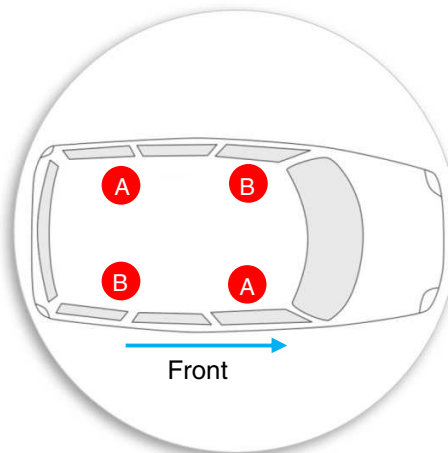

1.5

- Letters refer to the pad part numbers
- (A) Refers to Pad 11-04-222
- (B) Refers to Pad 11-04-223




1.6

- Fit rubber pad (from fitting kit) to foot as per diagram in step 1.5.
- Press pad firmly onto foot by putting thumb pressure on area where pad spigots engage.
- Make sure that pads are fitted correctly on nominated front and rear crossbars.
- Note: The rubber pad shape may vary to the shape of pads on the photos.



1.7

- Open fix point covers as shown

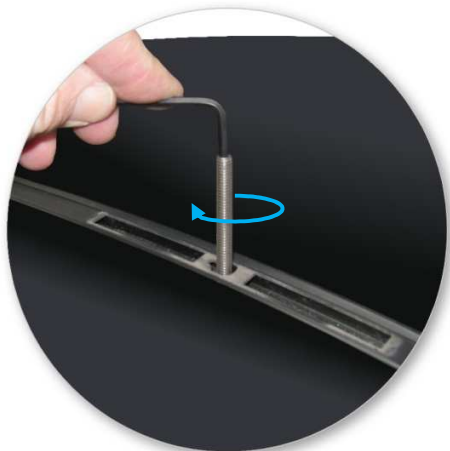

1.8

- Select four M6 x 80mm grub screws and screw them into the fixed point using 3mm Allen Key.
- Do not over tighten.
- Repeat for all four mounting positions.



1.9

- Place crossbars on roof.
- Make sure that grub screw passes through the hole in internal block on all four legs.



2.0

- Select red plastic knob and tighten crossbar to grub screw.
- In the fully tight position knob should sit in the same position as shown on the picture above to allow cover to close.
- Repeat for all four legs.



2.1

- Check that crossbars are tight on roof.
- Refit covers to legs.



Warning Notes:

- Use these instruction in conjunction with crossbar instructions

WARNING: Check the Tightness of Screws Regularly