

# K391 FITTING INSTRUCTIONS

These fitting instructions contain information specific for your vehicle. They should be read in conjunction with your crossbar instructions.

## Kit Contains

- 1 x Set of assembly Instructions
- 4 x Clamps
- 4 x Stepped Rubber Pads

## Items you may require that are not included:

- 1 x Tape measure


## Instructions

Replace the Standard Rubber Pads that come with the Crossbar with the Stepped Pads supplied in this fitting kit. Clamps directly to edge of roof under the doors, pin locates in hole on vehicle.


Maximum  
S-Wing  
Load  
Rating

**75**  
kg

When Fitted and loaded  
correctly

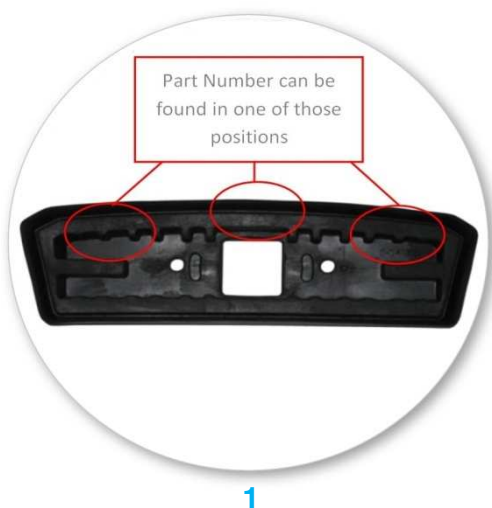

- Pad part numbers could be found on the underside of the pad.

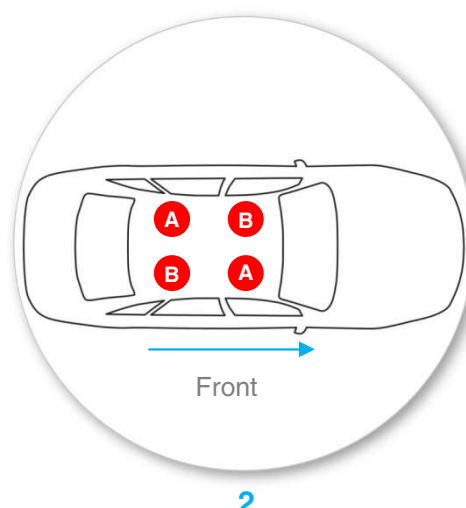

- Letters refer to the pad part numbers
- (A) Refers to Pad 11-04-250
- (B) Refers to Pad 11-04-251

### **Crossbar Spacing**

---

Pictured are S-Wing Flush Bars. Positioning also applicable for S-Wing Through Bars



### **Warning Notes:**

---

- Use these instruction in conjunction with crossbar instructions

**WARNING: Check the Tightness of Screws Regularly**