

K398 FITTING KIT INSTRUCTIONS

These fitting instructions contain information specific for your vehicle. They should be read in conjunction with your crossbar instructions.

Kit Contains

1 x Instructions
4 x Red Plastic Knobs with nuts
4 x Plastic Internal Blocks
4 x Grub Screws
1 x Allen Key 3mm

1 x Pad Pear Right Part № 11-04-230
1 x Pad Rear Left Part № 11-04-229
1 x Pad Front Right Part № 11-04-233
1 x Pad Front Left Part № 11-04-234

Maximum
Whispbar
Load
Rating

75
kg

When Fitted and loaded
correctly

Items you will require that are not included:

1 x Tape measure
1 x Medium sized flat screwdriver

Remove parts from box & check
Contact your Prorack dealer if any parts are missing or damaged

Important Note:

Whispbar Through Bar pictured in these instructions, also applicable for Whispbar Flush Bar



1



2



3

- Remove crossbars and fitting kit parts from the packaging
- Follow step 1-3 of crossbar assembly instructions
- Remove clamp block by pressing backwards

- Select plastic internal block (from fitting kit) and insert it into foot

- Repeat for all four legs



4

- Open trap door as shown and remove filling screw using screwdriver
- Note: Trap doors may look different from the once pictured above.




5

- Select four M6 x 90mm grub screws and screw them into the centre hole of the fixed point using 3mm Allen Key.
- Do not over tighten.
- Repeat steps 4-5 for all four positions.




6

- Pad part numbers could be found on the underside of the pad.

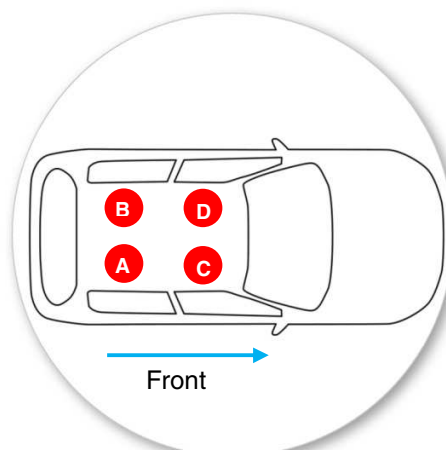

7

- Letters refer to the pad part numbers
- (A) Refers to Pad 11-04-230
- (B) Refers to Pad 11-04-229
- (C) Refers to Pad 11-04-233
- (D) Refers to Pad 11-04-234

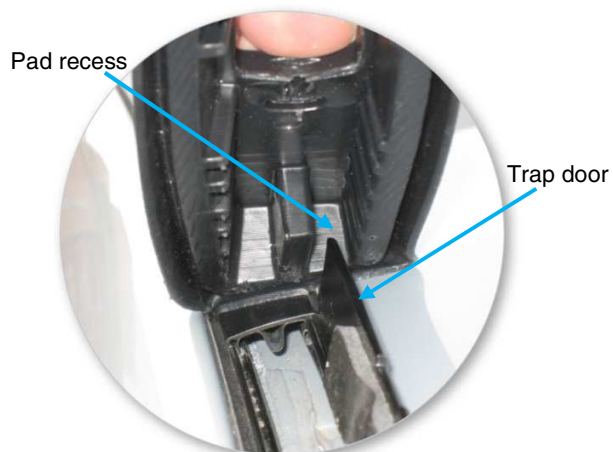

8

- Place pads on roof as per diagram in step 7
- Make sure that the trap door sits vertically in the recess in the pad (as shown)



9

- Place crossbars onto pads insuring that rubber dowels on the pad engage properly in the holes on the foot and that grub screw passes through the hole in internal block.
- Repeat for all four legs



10

- Select red plastic knob and tighten crossbar to grub screw.
- In the fully tight condition knob should sit in the same condition as shown on the picture above to allow cover to close
- Repeat for all four legs.



9

- Check that crossbars are tight on roof.
- Refit covers to legs.



Warning Notes:

- Use these instruction in conjunction with crossbar instructions

WARNING: Check the Tightness of Screws Regularly