

Load Rating

K427 ASSEMBLY AND FITTING INSTRUCTIONS

Kit Contains

1 x Instructions 4 x Clamps (labeled) 4 x Button Head Cap Screws 4 x Fiber Washers Remove parts from box & check Contact your Prorack dealer if any parts are missing or damaged

Items you will require that are not included:

• Tape measure

Important Note:

Whispbar Flush Bar pictured in these instructions, also applicable for Whispbar Through Bar


1. Crossbar Preparation







- To install Front Crossbar pull back outer rubber door seal
- Locate threaded inserts under black spots above the front doors
- Place Front Crossbar on to the roof
- Install front clamps
- Refit clamp block ensuring that adjusting screw spigot engaged in a hole on the clamp

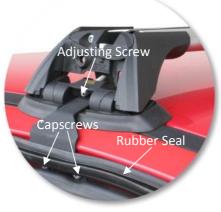

- Fit a fiber washer on to each button head capscrew
- Attach front clamps to the vehicle body with capscrews
- Progressively tighten the clamp block adjusting screws alternating from side to side to tension evenly
- Refit rubber seal over the clamp



- Check that crossbars feel tight on the roof
- Refit covers to legs.

Prorack Loads of adventure



- 2.3
- To install Rear Crossbar remove clamp block adjusting screws from crossbar feet
- Fit Rear clamps on to correct positions according to labels on them (Refer to Crossbar Instructions for details)
- Place Rear Crossbar on to the roof
- Clamps directly to edge of roof above rear windows
- Replace clamp block adjusting screws
- Progressively tighten adjusting screws. Alternate from side to side to tension evenly.
 Page 2 of 3

2. Positioning Crossbars on Vehicle



Warning Notes:

• Use these instruction in conjunction with crossbar instructions

WARNING: Check the Tightness of Screws Regularly



Page **3** of **3**