

K431 FITTING KIT INSTRUCTIONS

These fitting instructions contain information specific for your vehicle. They should be read in conjunction with your crossbar instructions.

Kit Contains

| | |
|---------------------------------|---|
| 1 x Instructions | 8 x M5 x 16mm Capscrews |
| 4 x Red Plastic Knobs with nuts | 8 x Spring Washers |
| 4 x Plastic Internal Blocks | 2 x Pads Part № 11-04-224 (A) |
| 4 x Grub Screws | 2 x Pads Part № 11-04-225 (B) |
| 1 x Allen Key 3mm | |
| 4 x Adaptor Plates | Refer to the step 1.5 for the correct position of pads. |

Maximum
Whispbar
Load
Rating

75
kg

When Fitted and loaded
correctly

Items you will require that are not included:

1 x Tape measure

Remove parts from box & check
Contact your Prorack dealer if any parts are missing or damaged

Important Note:

Whispbar Flush Bar pictured in these instructions, also applicable for Whispbar Through Bar



1.1



1.2




1.3

- Remove crossbar and fitting kit parts from the packaging
- Follow steps 1 to 3 of crossbar assembly instructions
- Remove clamp block by pressing it backwards
- Select plastic internal block (from fitting kit) and insert it into foot
- Repeat for all four legs




1.4

- Refer to the underside of the pad for the part number

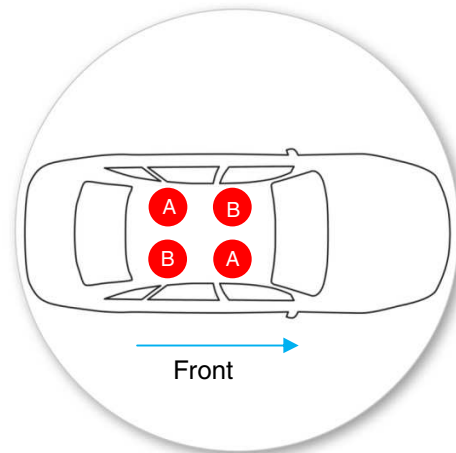


1.5

- Letters refer to the pad part numbers
- (A) Refers to Pad 11-04-224
- (B) Refers to Pad 11-04-225

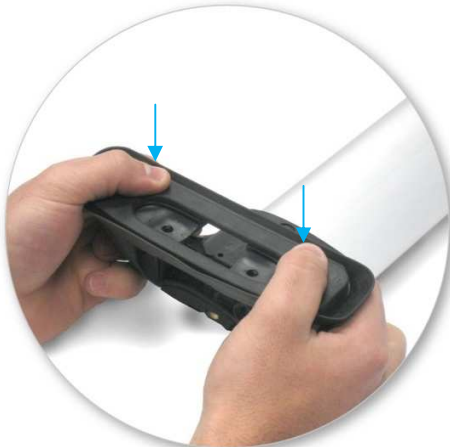

1.6

- Fit rubber pad (from fitting kit) to foot as per diagram in step 1.5.
- Press pad firmly onto foot by putting thumb pressure on area where pad spigots engage.
- Make sure that pads are fitted correctly on nominated front and rear crossbars.
- Note: The rubber pad shape may vary to the shape of pads on the photos.

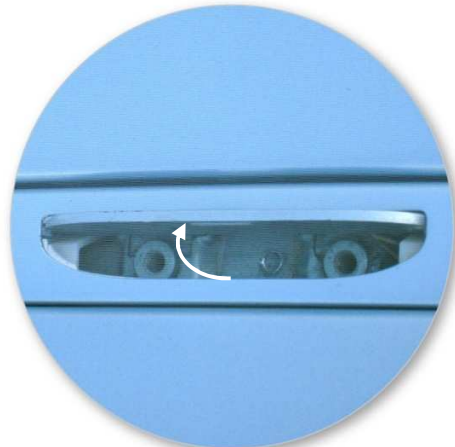


1.7

- Open vehicle fix point covers as shown



1.8

- Install adapter plate into each fixed point.
- Put a spring washer on each M5 button head bolt
- Secure adapter plate using M5 button head bolts and 3mm Allen Key supplied

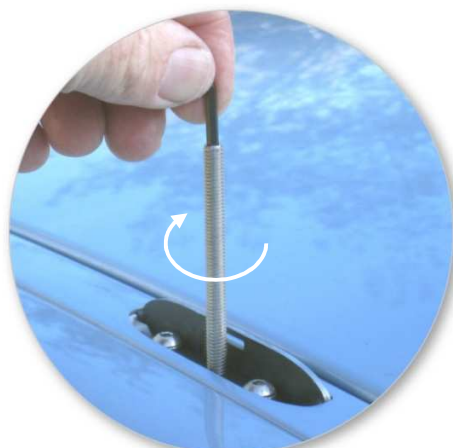

1.9

- Select four M6 x 70mm grub screws and screw them into the centre of the adaptor plates until it bottoms out on roof.
- Use 3mm Allen Key
- Do not over tighten.
- Repeat for all four mounting positions.



2.0

- Adjust crossbars length to suit distance between grub screws. (Refer to crossbar instructions for adjustment details)
- Place crossbars on roof.
- Make sure that grub screw passes through the hole in internal block on all four legs.



2.1

- Select red plastic knob and tighten crossbar to grub screw.
- In the fully tight position knob should sit in the same position as shown on the picture above to allow cover to close.
- Repeat for all four legs.



2.2

- Check that crossbars are tight on roof.



2.3

- Refit covers to legs.



Warning Notes:

- Use these instruction in conjunction with crossbar instructions

WARNING: Check the Tightness of Screws Regularly