

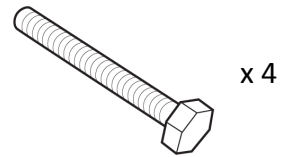
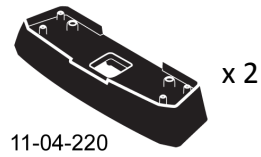
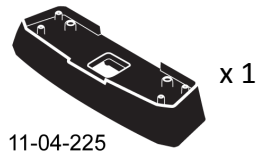
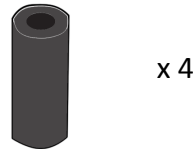


GB Fitting Instructions for Basic Carrier

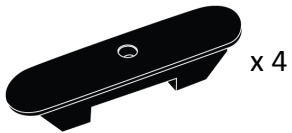

xx kg/lb + [] + [] = **MAX**
kgs (lbs)

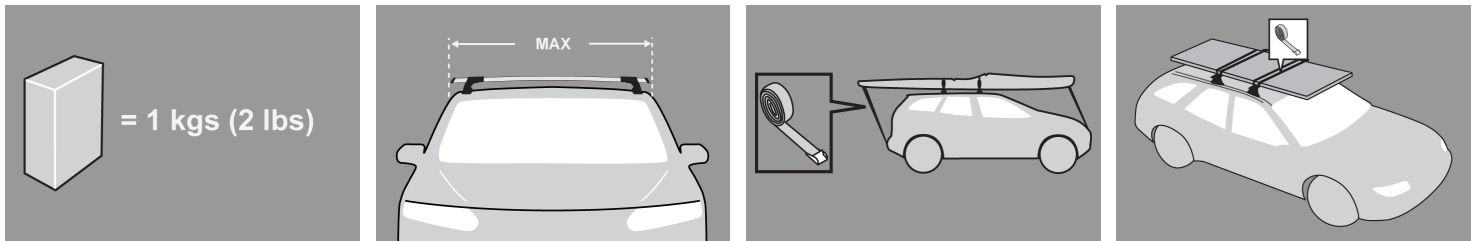

MAX kgs (lbs)



W/P

WHD


Volkswagen

Amarok Double Cab, 4dr Ute 10-+	ZA	75 kgs (165 lbs)	75 kgs (165 lbs)
Amarok Double Cab, 4dr Ute 10-+	EU	75 kgs (165 lbs)	75 kgs (165 lbs)
Amarok Double Cab, 4dr Ute 10-+	NZ	75 kgs (165 lbs)	75 kgs (165 lbs)
Amarok Double Cab, 4dr Ute 10-+	AU	75 kgs (165 lbs)	75 kgs (165 lbs)

First Time Installation



- Remove parts from inside the package and check. Contact your dealer if any parts are missing or damaged.

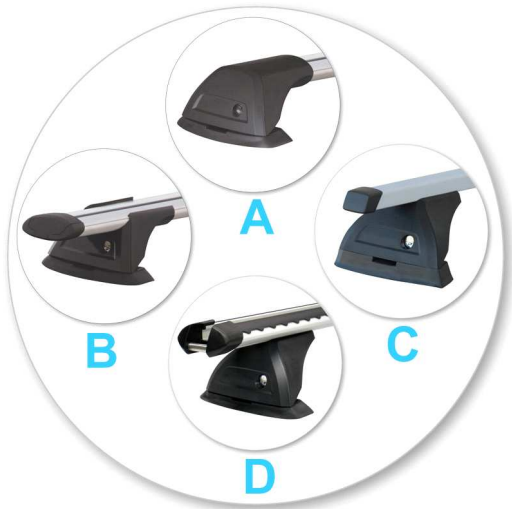

- This kit fits type A, B, C and D.
- These instructions show type A crossbar fitted. They also apply to type B, C and D.




- Use keys to remove covers.



- Use hex screwdriver to reverse adjusting screw 10 turns.




- Press adjusting screw and pull crossbar legs out. Refer to the crossbar instructions for crossbar adjustment.
- Ensure each end of the crossbar is adjusted equally.

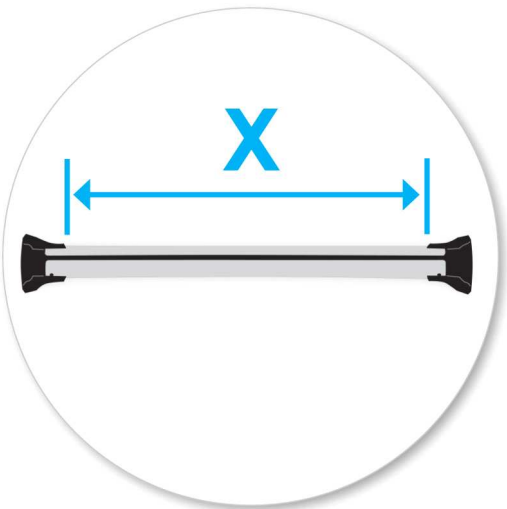

- Set bars to length (refer to the crossbar instructions for crossbar adjustment).
- Please check the rear of this manual for information relating specifically to your vehicle.



- Tighten adjusting screw to 5 Nm (3.7 ft lb).

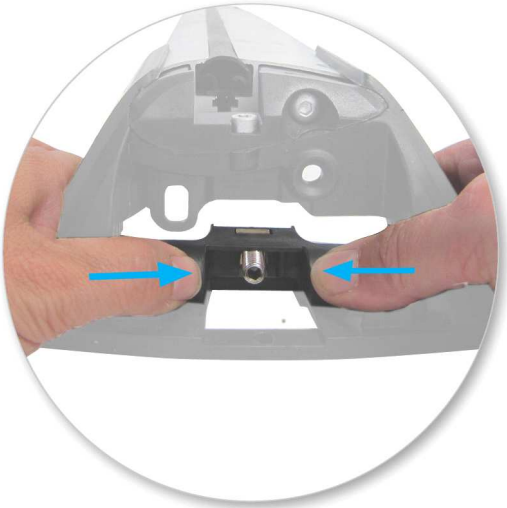


- Remove plastic clamp block by gripping bar leg with fingers and push firmly with thumbs until clamp block drops out behind leg.



- Select plastic internal block (from fitting kit) and insert into foot.
- Repeat for all legs.



- Refer to the underside of the pad for the part number.

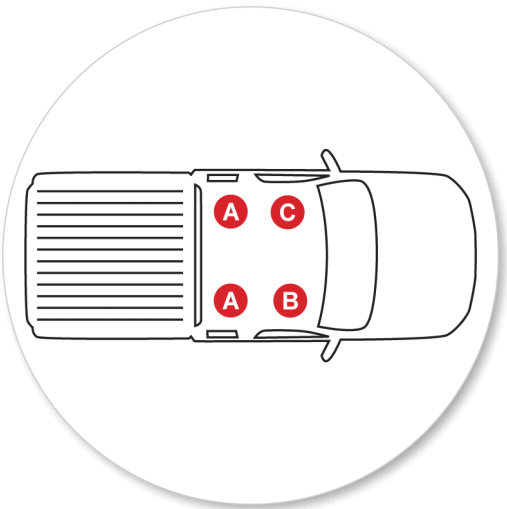

- It is important to put the pads in the correct position on the vehicle.
- Letters refer to the pad part numbers and position.
- Pad Part Number:
A = 11-04-220
B = 11-04-224
C = 11-04-225




- Fit rubber pads (supplied with fitting kit) to foot. Pad may vary in shape to that shown.
- Make sure the pad fits into the holes underneath the foot.

Fitment



- Open or remove fixed-point covers.
- Store items away in a safe place.

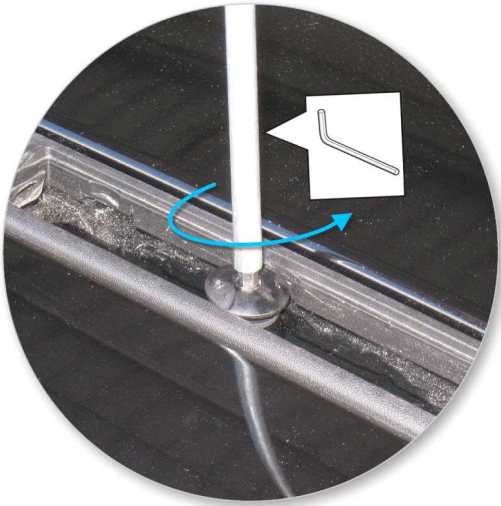

- Remove screws from the vehicle's fixed points



- Remove rubber washer from screw and re-install onto fixed point.



- Assemble as shown.
- Ensure rubber sleeve is installed as far onto the bolt as possible.



- Place crossbar foot over fixed-point mount.
- Ensure bolt engages with rubber washer and fixed-point thread.



- Tighten the red plastic knob.



- Ensure the red plastic knob is in the position shown when fully tightened.
- Repeat for all four positions.



- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers

CAUTION:

Recheck all fasteners immediately after a load is applied to the crossbars.

Regularly check screws are tight.




Maintenance

- Clean the car roof and surfaces of the product that will be in contact with the car roof.
- Follow the fitting instructions for fitting the product to your vehicle. Make sure all steps are carried out in order.
- Set crossbars a minimum distance of 700mm (27 1/2") apart where no other distance is specified in the fitting instructions. This is especially important when carrying long loads.
- Check unit is securely attached whenever you refit it to the vehicle. If the unit feels loose, refer to the fitting instructions and readjust.
- Some glass/panoramic roofs and radio antennae may not be able to be used when the product is fitted.
- Do not modify this product.
- Refer to the maximum permitted load capacity specified in the fitting instructions. Do not exceed the vehicle manufacturers roof load rating if it is lower than the maximum load capacity specified in the fitting instructions.
- Loads should not overhang the sides of the product and be evenly distributed with the lowest possible centre of gravity.
- Long loads should be secured with non-elastic straps to the front and rear of the vehicle.
- Objects with pointed ends (e.g. ski poles) should be carried with the pointed ends to the rear of the vehicle.
- Remove all loose or removable objects from the load prior to loading.
- Make sure all loads are securely fastened with non-elastic straps. Check regularly during longer journeys.

- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive carefully.
- Note that the total height of the vehicle increases when upright loads are carried.
- Products should be locked during transport if they have locks fitted.
- Check and replace worn out or defective parts.
- Keep the product clean and maintained.
- Never drive into a car wash with the roof rack system fitted.
- Lubricate locks and adjusting screws at regular intervals.
- Remove the products from the vehicle when not in use. Make sure all loose parts are stored safely.

-
- Yakima Australia Pty Ltd
17 Hinkler Court
Brendale QLD 4500
AUSTRALIA

www.whispbar.com
www.whispbar.com.au
www.whispbar.co.nz
www.whispbar.co.uk
www.whispbar.co.za
www.whispbar.eu
www.whispbar.ca

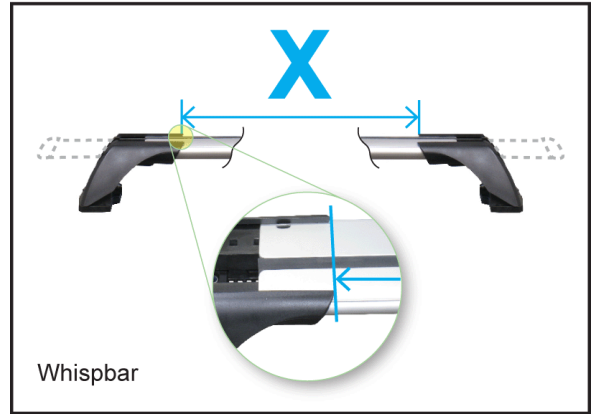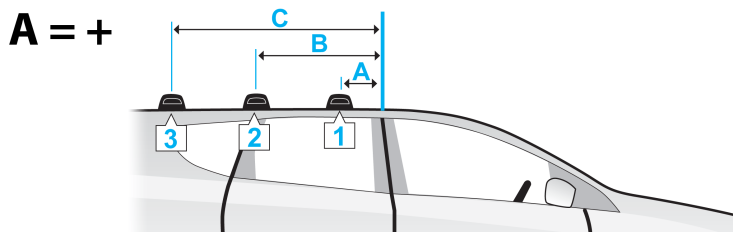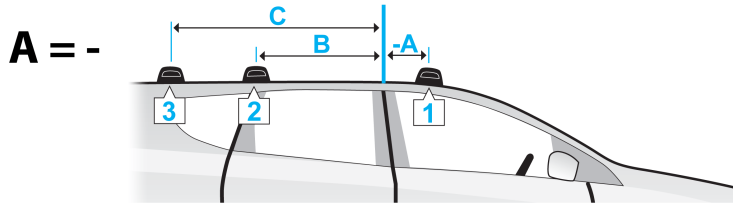

	A	B	C	X		
				1	2	3
Volkswagen Amarok Double Cab, 4dr Ute 10+ (AU)	-270mm -10 5/8"	500mm 19 11/16ths"	-	970mm 38 3/16ths"	955mm 37 5/8"	-
Volkswagen Amarok Double Cab, 4dr Ute 10+ (EU)	-270mm -10 5/8"	500mm 19 11/16ths"	-	970mm 38 3/16ths"	955mm 37 5/8"	-
Volkswagen Amarok Double Cab, 4dr Ute 10+ (NZ)	-270mm -10 5/8"	500mm 19 11/16ths"	-	970mm 38 3/16ths"	955mm 37 5/8"	-
Volkswagen Amarok Double Cab, 4dr Ute 10+ (ZA)	-270mm -10 5/8"	500mm 19 11/16ths"	-	970mm 38 3/16ths"	955mm 37 5/8"	-