







## Thule XT Kit 3034

# > Instructions

- VW California, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Caravelle, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Multivan, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Shuttle, 4-dr Bus, (T5) 03-15, (T6) 15-
- VW Transporter, 2-dr Single Cab, (T5) 03-15, (T6) 15-
- VW Transporter, 4-dr Double Cab, (T5) 03-15, (T6) 15-
- VW Transporter, 4-dr Van, (T5) 03-15, (T6) 15-

This kit is only for vehicles with fixpoint mounting or T-profile.

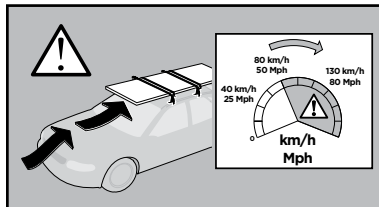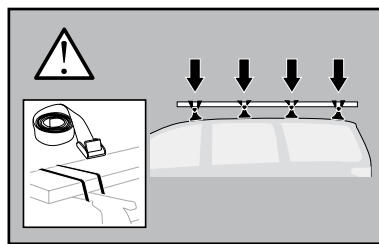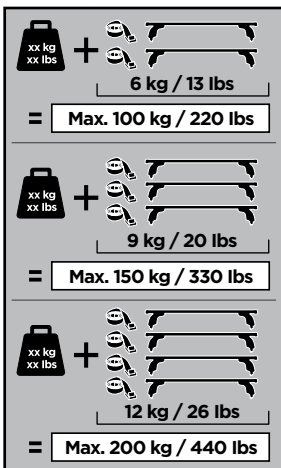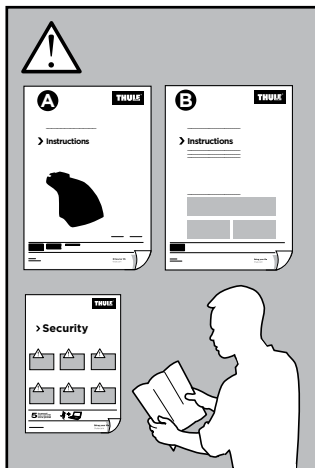










ISO 11154-E

183034





C.20150806  
509-3034-04

Bring your life  
thule.com




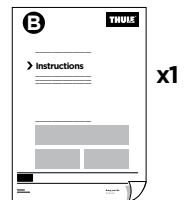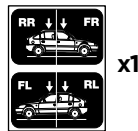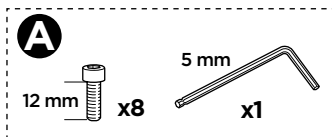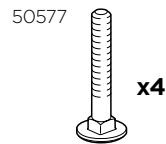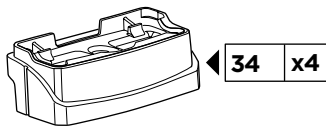



1

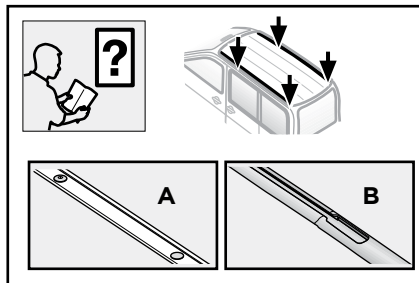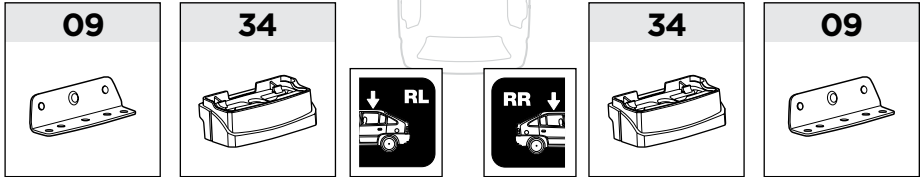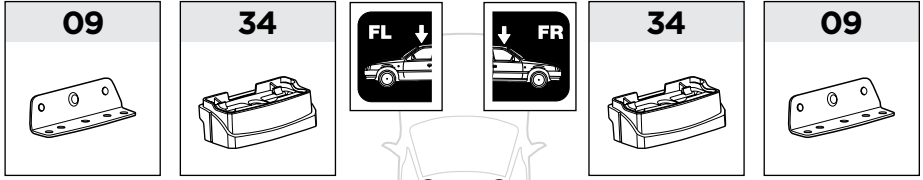


**2** A

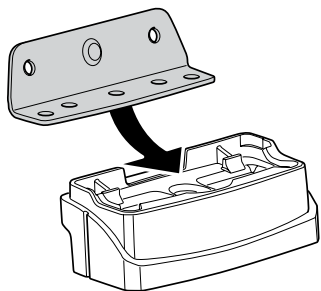


**B**

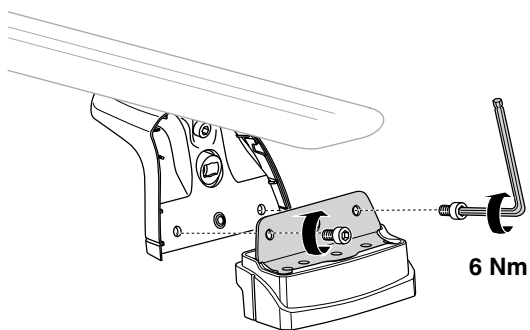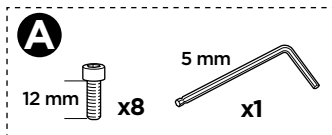


**3**








x1

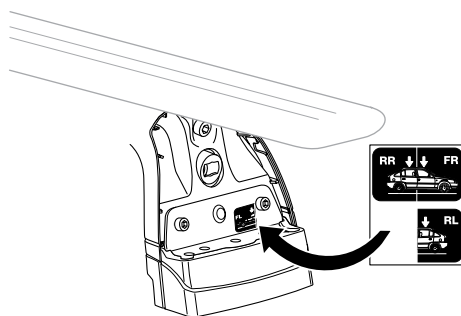


**4**




**A**

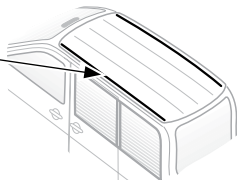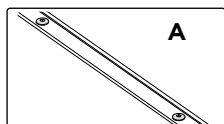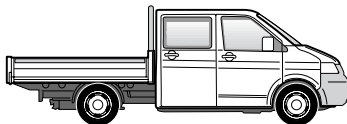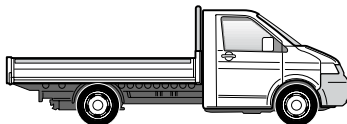


**A**

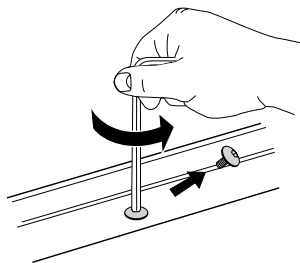


**B**

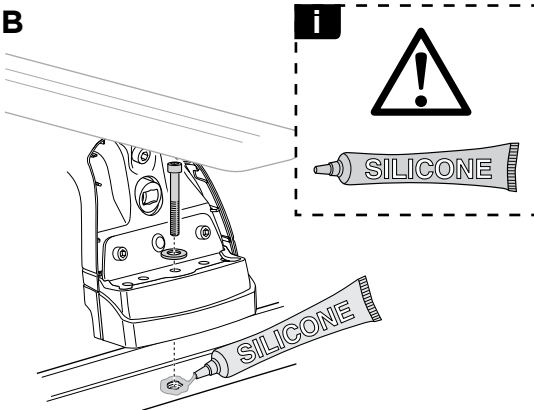


**C**

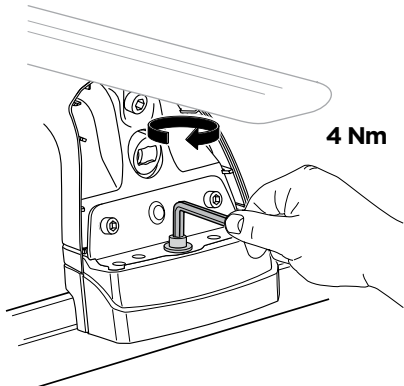

**D**

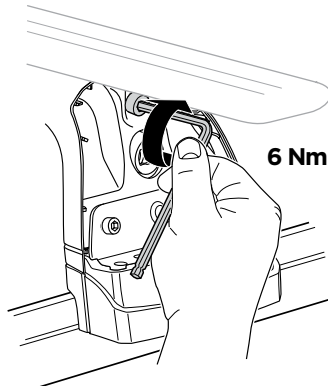



**4**




**A**

5 mm



x1

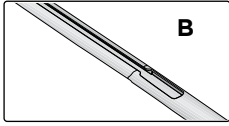


**B**

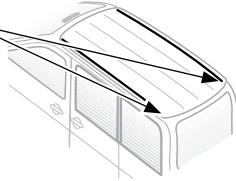


**A**

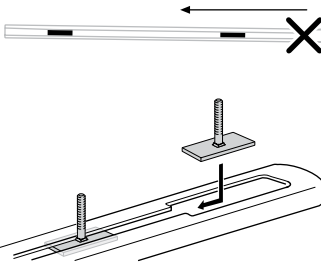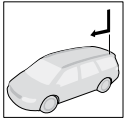

**B**

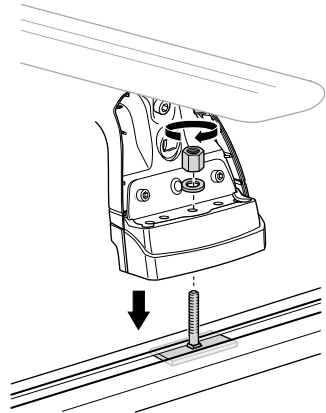


**C**

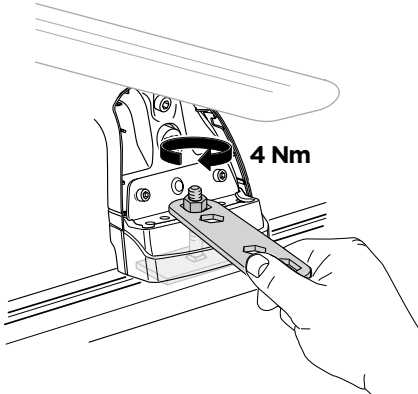

4 Nm

**D**

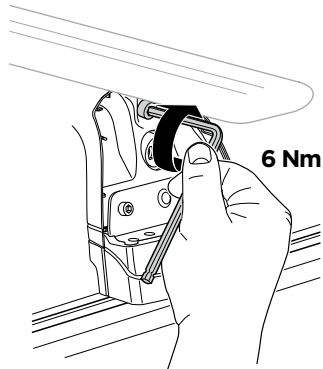

6 Nm

