K361 FITTING INSTRUCTIONS



These fitting instructions contain information specific for your vehicle. They should be read in conjunction with your crossbar instructions.

Kit Contains

4 x clamps


Contact your Prorack dealer if any parts are missing.

Items you may require that are not included:

1 x Tape measure

Instructions

Clamps directly to edge of roof under the doors

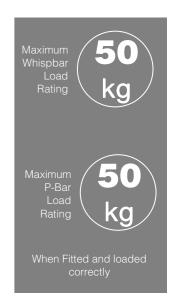

Crossbar Spacing

Pictured are Whispbar Flush Bars. Positioning also applicable for Whispbar Through Bars and P-Bars



