

K408 FITTING INSTRUCTIONS

These fitting instructions contain information specific for your vehicle. They should be read in conjunction with your crossbar instructions.

Kit Contains

- | | |
|----------------------------------|------------------------------------|
| 1 x Set of assembly Instructions | Remove parts from box & check |
| 2 x Front Clamps (with pin) | Contact your Prorack dealer if any |
| 2 x Rear Clamps (without pin) | parts are missing or damaged |
| 4 x Stepped Rubber Pads | |

Maximum
Whispbar
Load
Rating

75
kg

When Fitted and loaded
correctly

Items you may require that are not included:

- 1 x Tape measure


Important Note:

Whispbar Flush Bar pictured in these instructions, also applicable for Whispbar Through Bar

1. Crossbar Preparation



1.1

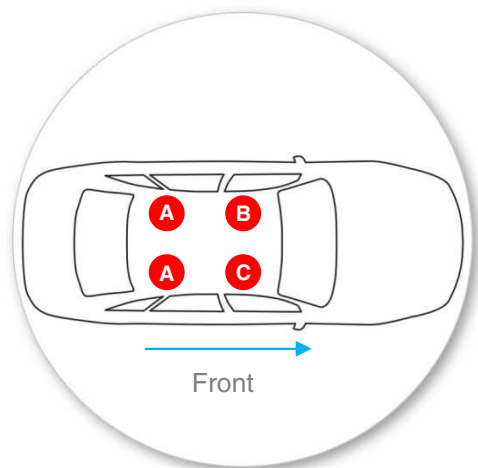

1.2

- Replace the Standard Rubber Pads that come with the Crossbar with the Stepped Pads supplied in this fitting kit.
 - Pad part numbers could be found on the underside of the pad.
 - Fit pads on crossbars as per diagram in step 1.2.
 - Press pad firmly onto foot by putting thumb pressure on area where pad spigots engage.
- Letters refer to the pad part numbers
 - Refers to Pad 11-04-241
 - Refers to Pad 11-04-250
 - Refers to Pad 11-04-251

2. Positioning Crossbars on Vehicle



2.1

- Locate the bars on the vehicle as indicated on the photo
- Remove clamp screws (Refer to crossbar instructions for details)
- Fit clamps
- Clamps directly to edge of roof under the doors, front clamp pins locate in holes on vehicle
- Replace clamp screws
- Progressively tighten the screws. Alternate from side to side to tension evenly.



2.2

- Check that crossbar feels tight on the roof
- Refit covers to leg.

Warning Notes:

- Use these instruction in conjunction with crossbar instructions

WARNING: Check the Tightness of Screws Regularly