

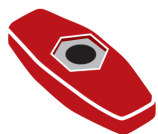
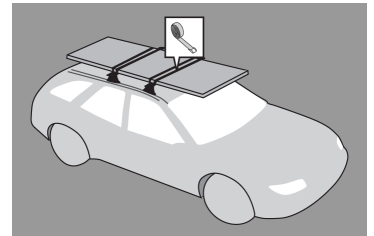
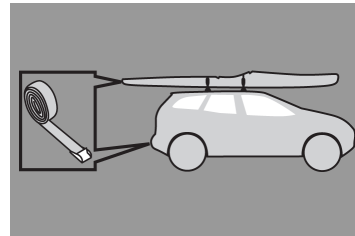


## GB Fitting Instructions for Basic Carrier

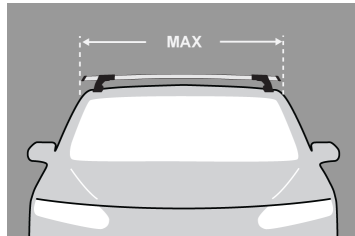

x 4

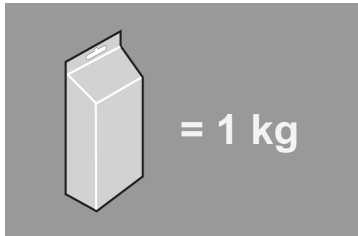

x 4



x 4



x 4




x 2

11-04-229




x 2

11-04-230




xx kg

+




+




=

MAX  
kg



MAX kg  
 W/P WHD

MAX kg  
 W/P WHD

**Volvo**  
S60 , 4dr Sedan 00- 09  
S60 , 4dr Sedan 00- 09

EU 75 75  
AU 75 75

S60 , 4dr Sedan 00- 09

NZ 75 75

## First Time Installation



- Remove parts from packaging and check contents. Contact your Prorack dealer if parts are missing or damaged.



- This kit fits type A, B, C and D.
- These instructions show type A crossbar fitted. They also apply to type B, C and D.




- Use keys to remove covers.



- Use hex screwdriver to reverse adjusting screw 10 turns.



- Press adjusting screw and pull crossbar legs out. Refer to the crossbar instructions for crossbar adjustment.
- Ensure each end of the crossbar is adjusted equally.

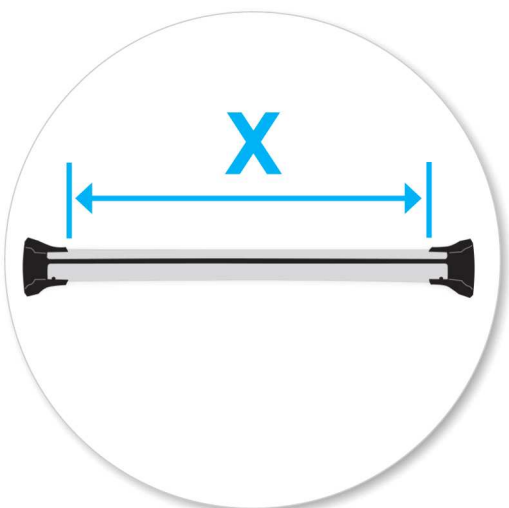

- Set bars to length (refer to the crossbar instructions for crossbar adjustment).
- Please check the rear of this manual for information relating specifically to your vehicle.



- Tighten adjusting screw to 5 Nm.




- Remove clamp block by pressing backwards.



- Select plastic internal block (from fitting kit) and insert into foot.
- Repeat for all legs.



- Refer to the underside of the pad for the part number.

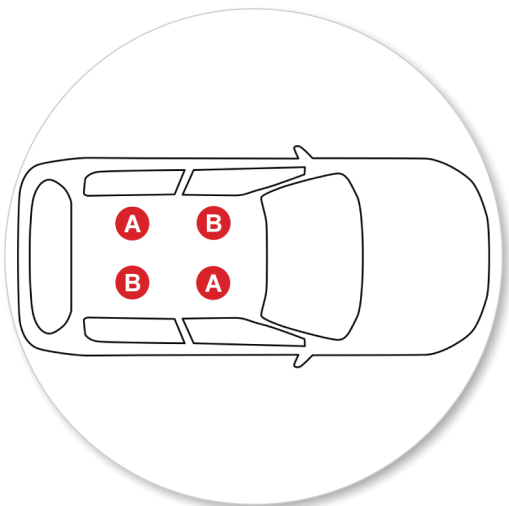

- It is important to put the pads in the correct position on the vehicle.
- Letters refer to the pad part numbers and position.
- Pad Part Number:  
A = 11-04-229  
B = 11-04-230



- Fit rubber pads (supplied with fitting kit) to foot. Pad may vary in shape to that shown.
- Make sure the pad fits into the holes underneath the foot.

## Fitment



- Locate vehicle's fixed points.



- Hook clamps into the fixed point on the vehicle using inner slots.



- Ensure internal clamp sits upright.
- Repeat for all four positions.



- Place crossbar foot over clamp bolt.



- Place washer over clamp thread as shown.
- Ensure that tab is inserted into clamp block.



- Tighten the red plastic knob. The side with the nut showing should be facing up.



- Ensure the red plastic knob is in the position shown when fully tightened.
- Repeat for all four positions.



- Check crossbar is securely attached to the vehicle.
- Use keys to fit and lock covers

**CAUTION:**  
Recheck all fasteners immediately after a load is applied to the crossbars.  
Regularly check screws are tight.

## Maintenance

- Clean the car roof and surfaces of the product that will be in contact with the car roof.
- Follow the fitting instructions for fitting the product to your vehicle. Make sure all steps are carried out in order.
- Set crossbars a minimum distance of 700mm apart where no other distance is specified in the fitting instructions. This is especially important when carrying long loads.
- Check unit is securely attached whenever you refit it to the vehicle. If the unit feels loose, refer to the fitting instructions and readjust.
- Some sunroofs and radio antennae cannot be used when the product is fitted.
- Do not modify this product.
- Refer to the maximum permitted load capacity specified in the fitting instructions. Do not exceed the vehicle manufacturers roof load rating if it is lower than the maximum load capacity specified in the fitting instructions.
- Loads should not overhang the sides of the product and be evenly distributed with the lowest possible centre of gravity.
- Long loads should be secured with non-elastic straps to the front and rear of the vehicle.
- Objects with pointed ends (skis) should be carried with the pointed ends to the rear of the vehicle.
- Remove all loose or removable objects from the load prior to loading.
- Make sure all loads are securely fastened with non-elastic straps. Check regularly during longer journeys.

- A loaded roof rack system can alter the performance of your vehicle. Be especially aware of the effects of side winds, changing of direction, and braking performance. Avoid rapid acceleration and deceleration. Drive carefully.
- Note that the total height of the vehicle increases when upright loads are carried.
- Products should be locked during transport if they have locks fitted.
- Check and replace worn out or defective parts.
- Keep the product clean and maintained.
- Never drive into a car wash with the roof rack system fitted.
- Lubricate locks and adjusting screws at regular intervals.
- Remove the products from the vehicle when not in use. Make sure all loose parts are stored safely.


---

● Hubco Automotive Ltd  
P. O. Box 11017  
Christchurch  
NEW ZEALAND




[www.whispbar.com](http://www.whispbar.com)

---

A = -

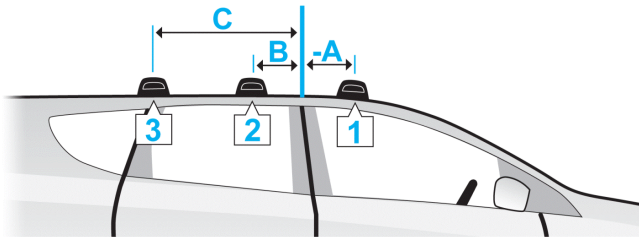

A = +

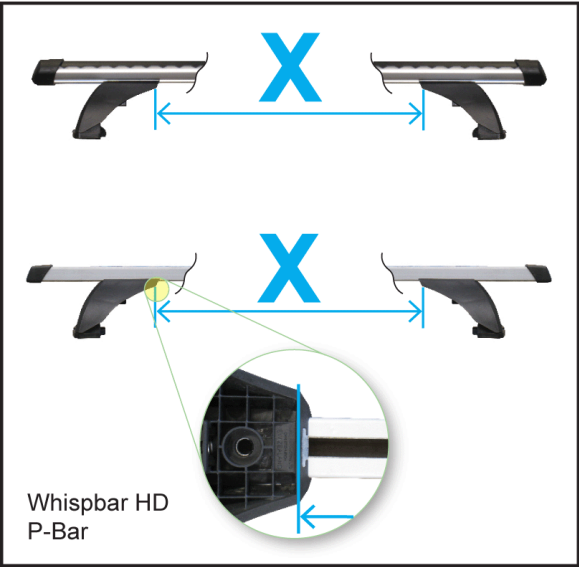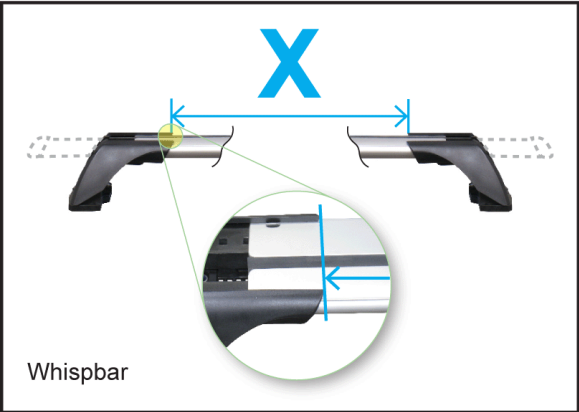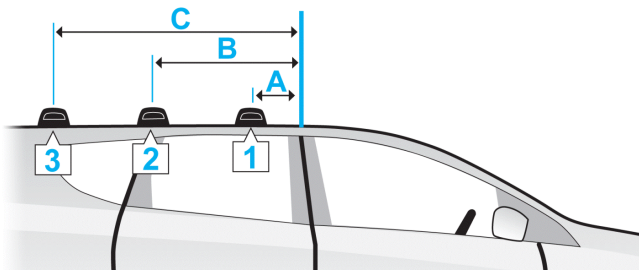

- Volvo S60 , 4dr Sedan 00- 09 (AU)
- Volvo S60 , 4dr Sedan 00- 09 (EU)
- Volvo S60 , 4dr Sedan 00- 09 (NZ)

A	B	C	X		
			1	2	3
-35cm	42cm	-	926mm	894mm	-
-13 3/4"	16 9/16ths"	-	36 7/16ths"	35 3/16ths"	-
-35cm	42cm	-	926mm	894mm	-
-13 3/4"	16 9/16ths"	-	36 7/16ths"	35 3/16ths"	-
-35cm	42cm	-	926mm	894mm	-
-13 3/4"	16 9/16ths"	-	36 7/16ths"	35 3/16ths"	-